 

PARTS MANUAL

T-BOSS




 ***LINHAI***

 Frame

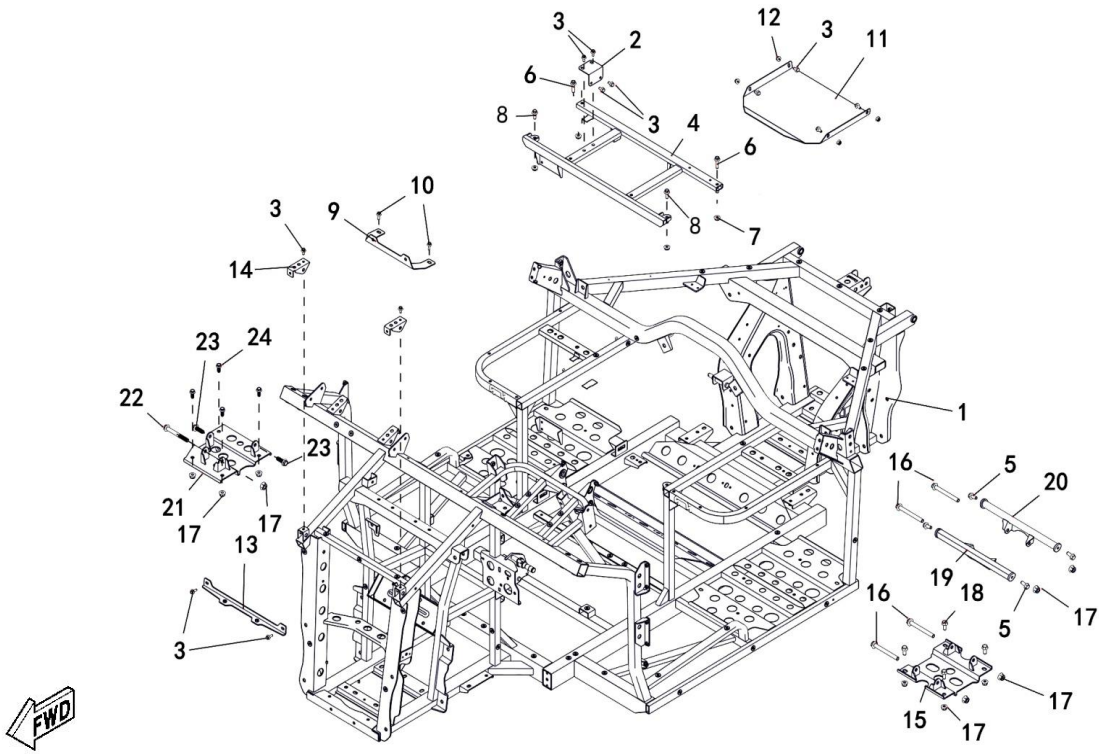


Ref.No.	Part Number	Description	Q'ty
1	LH00048055	Frame OF T-BOSS 550 E4	1
2	LH00048063	Bracket, Air Cleaner OF T-BOSS 550 E4	1
3	LH0010140B	Bolt M6X12 OF T-BOSS 550 E4	12
4	LH00048060	Cushion Support Component OF T-BOSS 550 E4	1
5	LH00010059	Bolt M8X25 OF T-BOSS 550 E4	4
6	LH00010078	Bolt M8X30 OF T-BOSS 550 E4	2
7	LH00011145	Nut M8 OF T-BOSS 550 E4	4
8	LH00010783	Bolt M8X20 OF T-BOSS 550 E4	2
9	LH00048086	Bracket, Radiator OF T-BOSS 550 E4	1
10	LH00011236	Bolt M8X16 OF T-BOSS 550 E4	2
11	LH00048118	Heat Protection Plate, Rear Gearcase OF T-BOSS 550 E4	1
12	LH00011233	Nut M6 OF T-BOSS 550 E4	4
13	LH00048061	Bracket, Fixed Hood OF T-BOSS 550 E4	1
14	LH00048062	Bracket, Instrument Panel OF T-BOSS 550 E4	2
15	LH00048056	Bracket, Rear Axle OF T-BOSS 550 E4	1
16	LH00011050	Bolt M10×1.25×110 OF T-BOSS 550 E4	4
17	LH00010795	Nut M10 OF T-BOSS 550 E4	13
18	LH00011237	Bolt M10×1.25×20 OF T-BOSS 550 E4	4
19	LH00048064	Pipe, Rear Axle, Front OF T-BOSS 550 E4	1
20	LH00048065	Pipe, Rear Axle, Rear OF T-BOSS 550 E4	1
21	LH00048057	Bracket, Front Axle OF T-BOSS 550 E4	1
22	LH00011146	Bolt M10×1.25×90 OF T-BOSS 550 E4	1
23	LH00010541	Bolt M10×1.25×30 OF T-BOSS 550 E4	2
24	LH00011237	Bolt M10×1.25×20 OF T-BOSS 550 E4	4

Front Fender

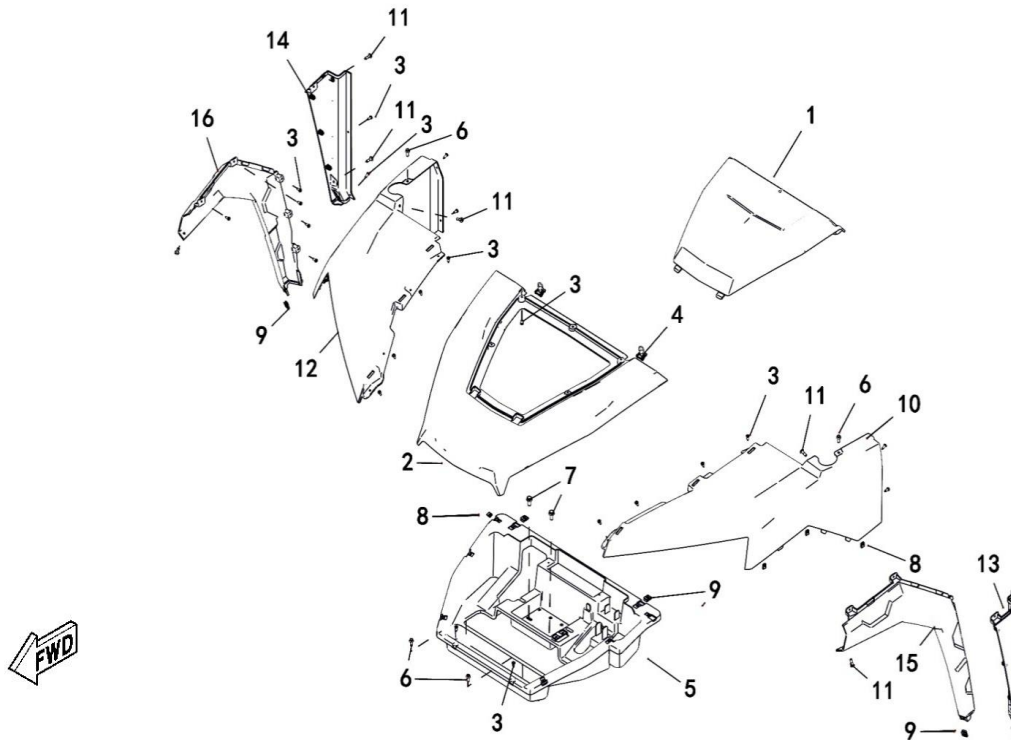


Ref.No.	Part Number	Description	Q'ty
1	LH00048204	Removable Hood OF T-BOSS 550 E4	1
2	LH0482056g	Fixed Hood,White OF T-BOSS 550 E4	1
2	LH0482053l	Fixed Hood,Blue OF T-BOSS 550 E4	1
2	LH0482052h	Fixed Hood,Red OF T-BOSS 550 E4	1
2	LH0482057c	Fixed Hood,Vista Camouflage OF T-BOSS 550 E4	1
2	LH0482057e	Fixed Hood,Reality Camouflage OF T-BOSS 550 E4	1
3	LH00048316	Tapping Screw M5 ×16 OF T-BOSS 550 E4	33
4	LH00048253	Fast Disassembled Screw OF T-BOSS 550 E4	2
5	LH00048206	Battery Box OF T-BOSS 550 E4	1
6	LH00048269	Bolt M6X16 OF T-BOSS 550 E4	4
7	LH00010783	Bolt M8X20 OF T-BOSS 550 E4	2
8	LH00048314	Spring Nut M5 OF T-BOSS 550 E4	12
9	LH00070960	Spring Nut M6 OF T-BOSS 550 E4	4
10	LH0482076g	Fender Front,Lh, White OF T-BOSS 550 E4	1
10	LH0482073l	Fender Front,Lh, Blue OF T-BOSS 550 E4	1
10	LH0482072h	Fender Front,Lh, Red OF T-BOSS 550 E4	1
10	LH0482077c	Fender Front,Lh, Vista Camouflage OF T-BOSS 550 E4	1
10	LH0482077e	Fender Front,Lh, Reality Camouflage OF T-BOSS 550 E4	1
12	LH0482086g	Fender Front,Rh,White OF T-BOSS 550 E4	1
12	LH0482083l	Fender Front,Rh,Blue OF T-BOSS 550 E4	1
12	LH0482082h	Fender Front,Rh,Red OF T-BOSS 550 E4	1
12	LH0482087c	Fender Front,Rh,Vista Camouflage OF T-BOSS 550 E4	1
12	LH0482087e	Fender Front,Rh,Reality Camouflage OF T-BOSS 550 E4	1
13	LH0482116g	Lh Lower Front Mudguards,White OF T-BOSS 550 E4	1

 Body,Dash

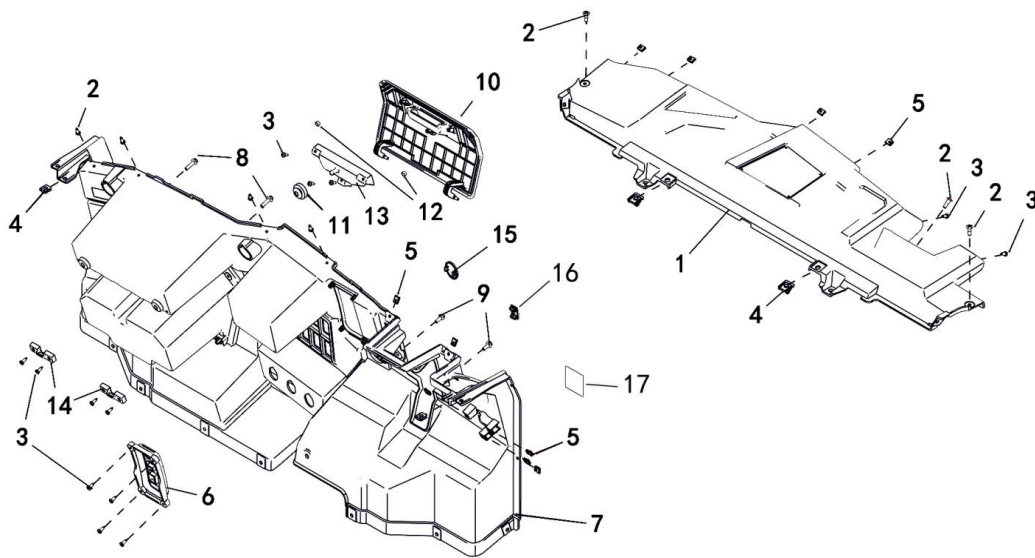


Ref.No.	Part Number	Description	Q'ty
1	LH00048213	Upper Panel, Instrument OF T-BOSS 550 E4	1
2	LH00048270	Screw M6x20 OF T-BOSS 550 E4	15
3	LH00048316	Tapping Screw M5 x16 OF T-BOSS 550 E4	13
4	LH00070960	Spring Nut M6 OF T-BOSS 550 E4	7
5	LH00048314	Spring Nut M5 OF T-BOSS 550 E4	10
6	LH00048215	Cover, Shift Lever OF T-BOSS 550 E4	1
6	LH00048446	Cover, Shift Lever OF T-BOSS 550 E4 NEW	1
7	LH00048216	Panel, Instrument OF T-BOSS 550 E4	1
8	LH00048268	Bolt M6X25 OF T-BOSS 550 E4	2
9	LH00048269	Bolt M6X16 OF T-BOSS 550 E4	2
10	LH00048217	Lid, Glovebox OF T-BOSS 550 E4	1
11	LH00048218	Grommet Rubber,Mount OF T-BOSS 550 E4	1
12	LH00048219	Cushion Rubber OF T-BOSS 550 E4	2
13	LH00048220	Fixed Support,Glovebox Lid OF T-BOSS 550 E4	1
14	LH00048221	Retainer, Glovebox Lid OF T-BOSS 550 E4	2
15	LH00048264	Cap,USB OF T-BOSS 550 E4	1
16	LH00073048	Cap, Electrical Switch OF T-BOSS 550 E4	5
17	LH00048289	Cover,2WD/4WD Switch OF T-BOSS 550 E4	1

 Body, Fenders

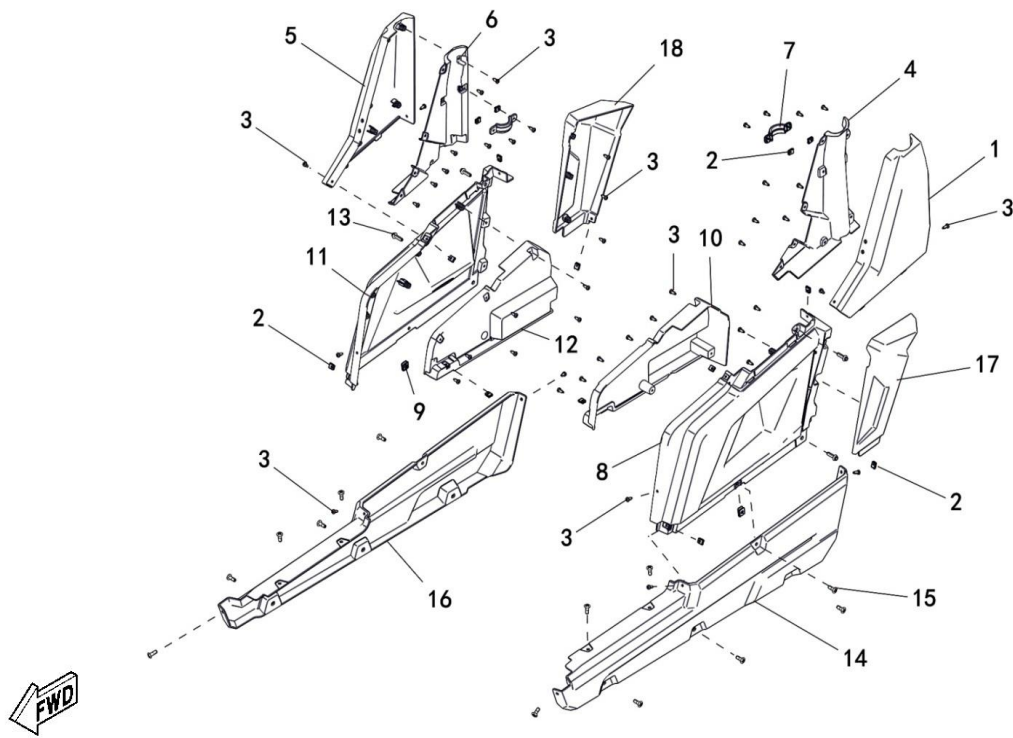


Ref.No.	Part Number	Description	Q'ty
1	LH0482306g	LH Upper Panel,White OF T-BOSS 550 E4	1
1	LH0482303L	LH Upper Panel,Blue OF T-BOSS 550 E4	1
1	LH0482302h	LH Upper Panel,Red OF T-BOSS 550 E4	1
1	LH0482307c	LH Upper Panel,Vista Camouflage OF T-BOSS 550 E4	1
1	LH0482307e	LH Upper Panel,Reality Camouflage OF T-BOSS 550 E4	1
2	LH00048314	Spring Nut M5 OF T-BOSS 550 E4	14
3	LH00048316	Tapping Screw M5 ×16 OF T-BOSS 550 E4	46
4	LH00048249	LH Upper Panel, Liner Panel OF T-BOSS 550 E4	1
5	LH0482316g	RH Upper Panel,White OF T-BOSS 550 E4	1
5	LH0482313L	RH Upper Panel,Blue OF T-BOSS 550 E4	1
5	LH0482312h	RH Upper Panel,Red OF T-BOSS 550 E4	1
5	LH0482317c	RH Upper Panel,Vista Camouflage OF T-BOSS 550 E4	1
5	LH0482317e	RH Upper Panel,Reality Camouflage OF T-BOSS 550 E4	1
6	LH00048250	RH Upper Panel, Liner Panel OF T-BOSS 550 E4	1
7	LH00048222	Side Panel Mounting Button OF T-BOSS 550 E4	2
8	LH0482326g	LH Lower Panel,White OF T-BOSS 550 E4	1
8	LH0482323L	LH Lower Panel,Blue OF T-BOSS 550 E4	1
8	LH0482322h	LH Lower Panel,Red OF T-BOSS 550 E4	1
8	LH0482327c	LH Lower Panel,Vista Camouflage OF T-BOSS 550 E4	1
8	LH0482327e	LH Lower Panel,Reality Camouflage OF T-BOSS 550 E4	1
9	LH00070960	Spring Nut M6 OF T-BOSS 550 E4	2
10	LH00048223	LH Lower Panel, Liner Panel OF T-BOSS 550 E4	1
11	LH0482336g	RH Lower Panel,White OF T-BOSS 550 E4	1
11	LH0482333L	RH Lower Panel,Blue OF T-BOSS 550 E4	1

 Body, Box

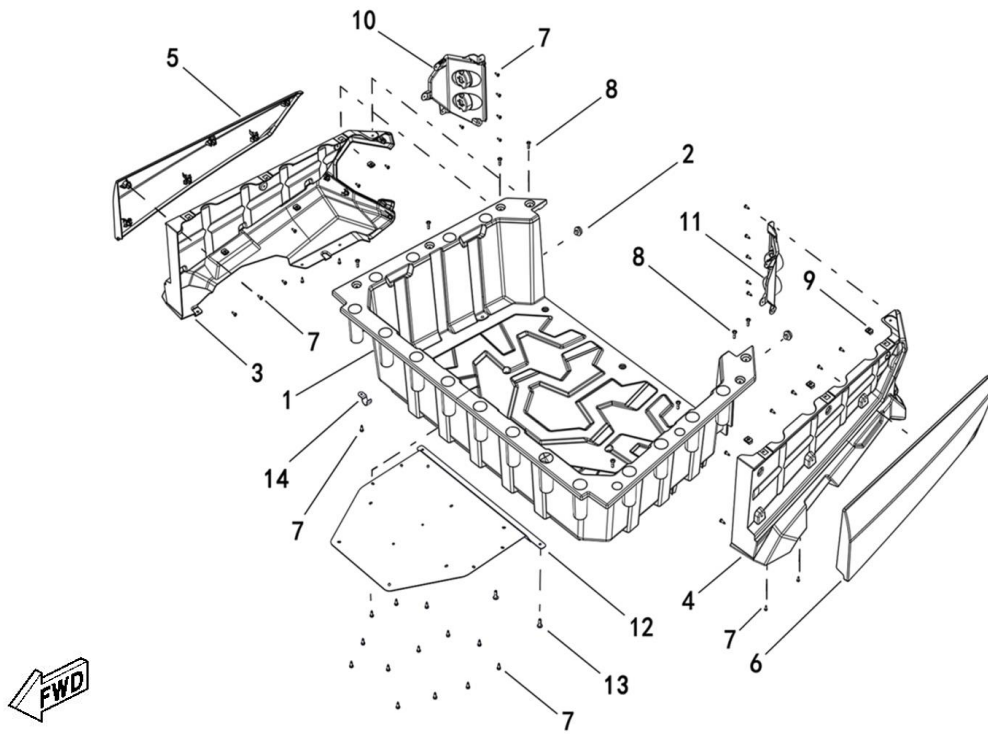


Ref.No.	Part Number	Description	Q'ty
1	LH00048242	Box Floor Cover OF T-BOSS 550 E4	1
2	LH00048145	Box Rear Panel Rubber Stopper OF T-BOSS 550 E4	2
3	LH00048241	Box Cover,R OF T-BOSS 550 E4	1
4	LH00048240	Box Cover,L OF T-BOSS 550 E4	1
5	LH0482396g	Box Cover,R Cover Cap,White OF T-BOSS 550 E4	1
5	LH0482393L	Box Cover,R Cover Cap,Blue OF T-BOSS 550 E4	1
5	LH0482392h	Box Cover,R Cover Cap,Red OF T-BOSS 550 E4	1
5	LH0482397c	Box Cover,R Cover Cap,Vista Camouflage OF T-BOSS 550 E4	1
5	LH0482397E	Box Cover,R Cover Cap,Reality Camouflage OF T-BOSS 550 E4	1
6	LH0482386g	Box Cover,L Cover Cap,White OF T-BOSS 550 E4	1
6	LH0482383L	Box Cover,L Cover Cap,Blue OF T-BOSS 550 E4	1
6	LH0482382h	Box Cover,L Cover Cap,Red OF T-BOSS 550 E4	1
6	LH0482387c	Box Cover,L Cover Cap,Vista Camouflage OF T-BOSS 550 E4	1
6	LH0482387E	Box Cover,L Cover Cap,Reality Camouflage OF T-BOSS 550 E4	1
7	LH00048316	Tapping Screw M5 x16 OF T-BOSS 550 E4	40
8	LH00048270	Screw M6x20 OF T-BOSS 550 E4	8
9	LH00070960	Spring Nut M6 OF T-BOSS 550 E4	6
10	LH00048244	Rear Light Cover,R OF T-BOSS 550 E4	1
11	LH00048243	Rear Light Cover,L OF T-BOSS 550 E4	1
12	LH00048146	Box thermal baffle OF T-BOSS 550 E4	1
13	LH00048269	Hexagon Flange Bolt M6x16 OF T-BOSS 550 E4	2
14	LH00048312	Box Rear Light Wire Nail OF T-BOSS 550 E4	1

 Body, Box, Tailgate

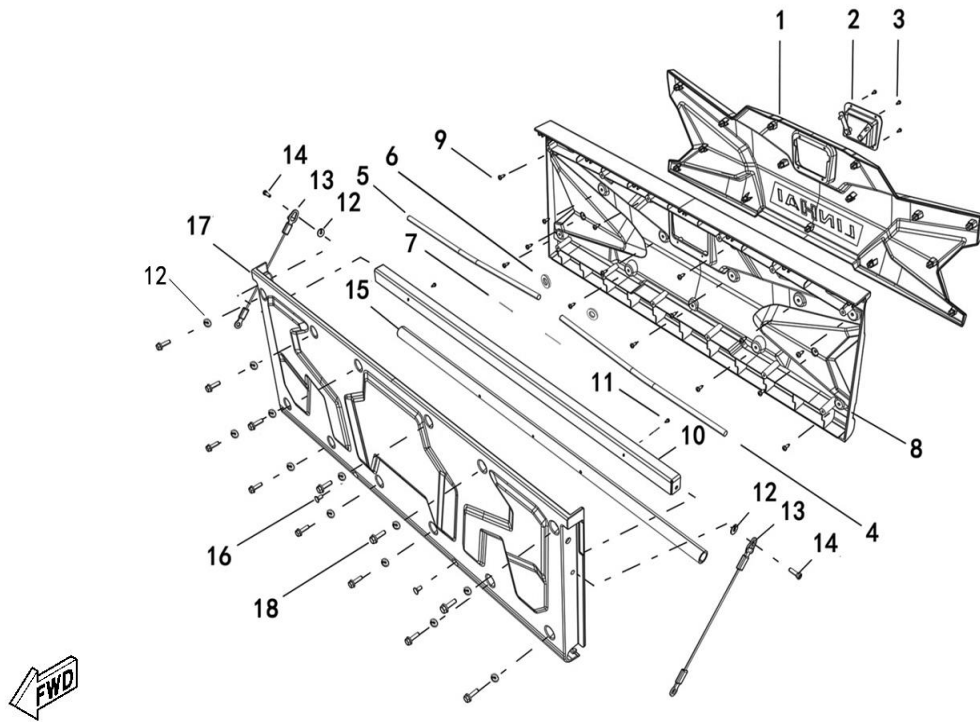


Ref.No.	Part Number	Description	Q'ty
1	LH0482476g	Box Rear Panel Cover Cap,White OF T-BOSS 550 E4	1
1	LH0482473L	Box Rear Panel Cover Cap,Blue OF T-BOSS 550 E4	1
1	LH0482472h	Box Rear Panel Cover Cap,Red OF T-BOSS 550 E4	1
1	LH0482477c	Box Rear Panel Cover Cap,Vista Camouflage OF T-BOSS 550 E4	1
1	LH0482477e	Box Rear Panel Cover Cap,Reality Camouflage OF T-BOSS 550 E4	1
1	LH0483346g	Box Rear Panel Cover Cap,White (No LINHAI Logo) OF T-BOSS 550 E4	1
1	LH0483343L	Box Rear Panel Cover Cap,Blue (No LINHAI Logo) OF T-BOSS 550 E4	1
1	LH0483342h	Box Rear Panel Cover Cap,Red (No LINHAI Logo) OF T-BOSS 550 E4	1
1	LH0483347c	Box Rear Panel Cover Cap,Vista Camouflage (No LINHAI Logo) OF T-BOSS 550 E4	1
1	LH0483347e	Box Rear Panel Cover Cap,Reality Camouflage (No LINHAI Logo) OF T-BOSS 550 E4	1
2	LH00048137	Box Rear Panel Handle OF T-BOSS 550 E4	1
3	LH00011242	Tapping Screw ST4.2×13 OF T-BOSS 550 E4	4
4	LH00048140	Box Rear Panel Lock Pin , L OF T-BOSS 550 E4	1
5	LH00048141	Box Rear Panel Lock Pin , R OF T-BOSS 550 E4	1
6	LH00048150	Handle Adjust Washer OF T-BOSS 550 E4	2
7	LH00048149	Handle Cotter Pin OF T-BOSS 550 E4	2
8	LH00048246	Box Rear Panel OF T-BOSS 550 E4	1
9	LH00048316	Tapping Screw M5 ×16 OF T-BOSS 550 E4	15
10	LH00048138	Box Rear Panel Mounting Plate OF T-BOSS 550 E4	1
11	LH00011243	Tapping Screw ST4.8×10 OF T-BOSS 550 E4	2
12	LH00010308	Spring Lock Washer 6 OF T-BOSS 550 E4	14
13	LH00048148	Upper Retainer Cable OF T-BOSS 550 E4	2
14	LH00048147	Inner Hexagonal Flat Head Step Bolt M6×20 OF T-BOSS 550 E4	2
15	LH00048144	Box Rear Panel Axis OF T-BOSS 550 E4	1
16	LH00011151	Cross Recessed Countersunk Head Screw M6×12 OF T-BOSS 550 E4	2
17	LH00048245	Box Inner Panel OF T-BOSS 550 E4	1
18	LH00048269	Hexagon Flange Bolt M6×16 OF T-BOSS 550 E4	12

 Front Suspension

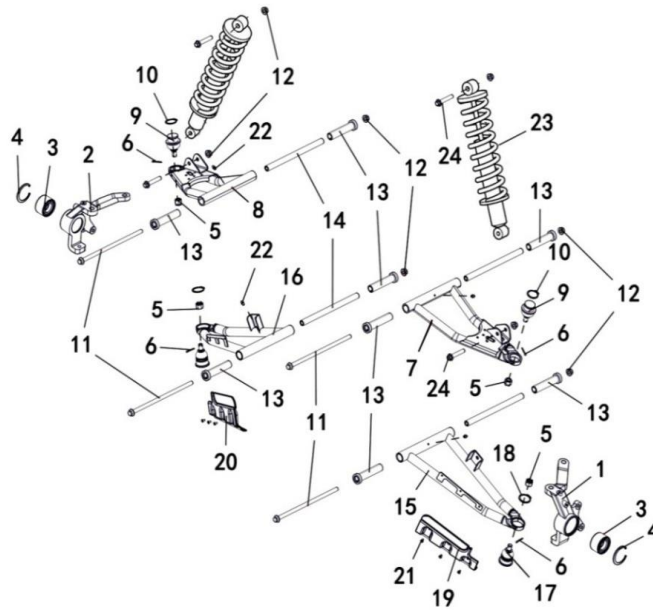


Ref.No.	Part Number	Description	Q'ty
1	LH00048091	Carrier Bearing,Front,Lh OF T-BOSS 550 E4	1
2	LH00048094	Carrier Bearing,Front,Rh OF T-BOSS 550 E4	1
3	LH00048092	Bearing OF T-BOSS 550 E4	2
4	LH00011204	Circlip 55 OF T-BOSS 550 E4	2
5	LH00070679	Nut M12x1.25 OF T-BOSS 550 E4	4
6	LH00010792	Pin 3.2x22 OF T-BOSS 550 E4	4
7	LH00048109	Arm Upper Frt Lh OF T-BOSS 550 E4	1
8	LH00048110	Arm Upper Frt Rh OF T-BOSS 550 E4	1
9	LH00048090	Ball Joint,Upper OF T-BOSS 550 E4	2
10	LH00011152	Circlip 32 OF T-BOSS 550 E4	2
11	LH00048107	Scr Hxfl,Frt Arm OF T-BOSS 550 E4	4
12	LH00010795	Nut M10 OF T-BOSS 550 E4	8
13	LH00048106	Bushing,Long OF T-BOSS 550 E4	8
14	LH00048105	Shaft Pivot OF T-BOSS 550 E4	4
15	LH00048108	Arm Lwr Frt Lh OF T-BOSS 550 E4	1
16	LH00048111	Arm Lwr Frt Rh OF T-BOSS 550 E4	1
17	LH00048089	Ball Joint,Lwr OF T-BOSS 550 E4	2
18	LH00070046	Circlip 34 OF T-BOSS 550 E4	2
19	LH00084251	Cover, Arm Lwr Frt Lh OF T-BOSS 550 E4	1
20	LH00084252	Cover, Arm Lwr Frt Rh OF T-BOSS 550 E4	1
21	LH00011153	Screw M5X10 OF T-BOSS 550 E4	6
22	LH00027074	Grease Fitting M6 OF T-BOSS 550 E4	4
23	LH00048093	Front Shock Absorber Assy OF T-BOSS 550 E4	2
24	LH00011238	Bolt M10X1.25X57 OF T-BOSS 550 E4	4

 Rear Suspension

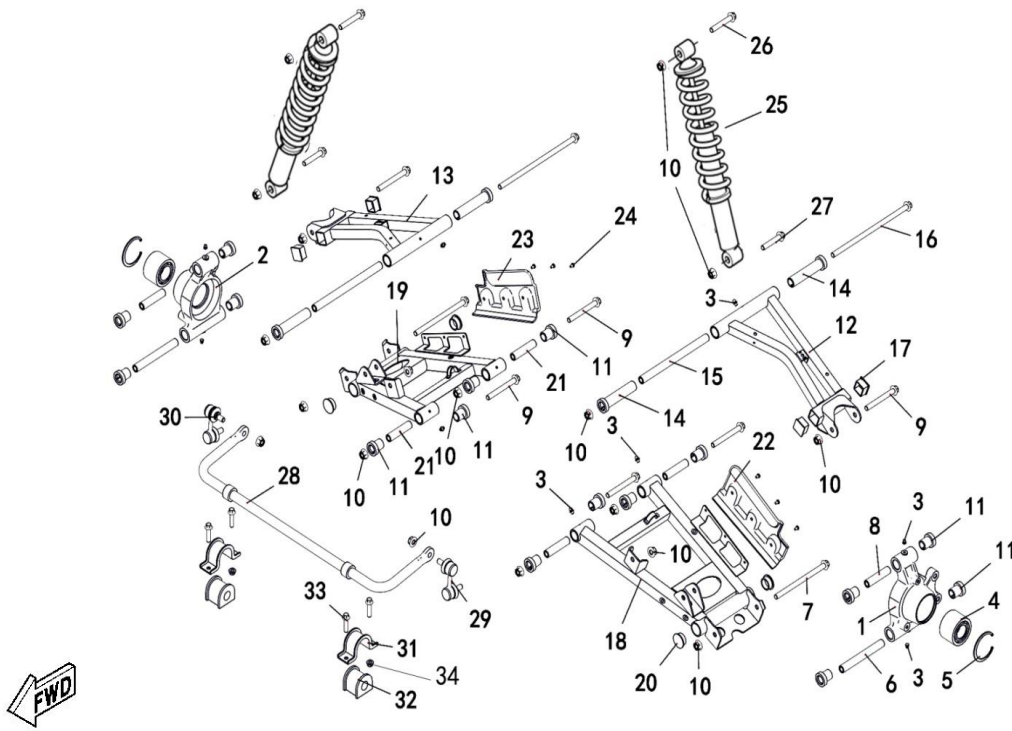


Ref.No.	Part Number	Description	Q'ty
1	LH00048164	Carrier Bearing Wheel Rear Lh OF T-BOSS 550 E4	1
2	LH00048165	Carrier Bearing Wheel Rear Rh OF T-BOSS 550 E4	1
3	LH00027074	Grease Fitting M6 OF T-BOSS 550 E4	10
4	LH00048077	Bearing OF T-BOSS 550 E4	2
5	LH00011155	Circlip 63 OF T-BOSS 550 E4	2
6	LH00048161	Shaft Pivot ,Lwr OF T-BOSS 550 E4	2
7	LH00048162	Scr Hxfl,Rear Arm,Lwr OF T-BOSS 550 E4	2
8	LH00048160	Shaft Pivot ,Upper OF T-BOSS 550 E4	2
9	LH00011146	Bolt M10X1.25X90 OF T-BOSS 550 E4	6
10	LH00010795	Nut M10 OF T-BOSS 550 E4	18
11	LH00048070	Bushing,Short OF T-BOSS 550 E4	16
12	LH00048074	Arm Upper Rear Lh OF T-BOSS 550 E4	1
13	LH00048075	Arm Upper Rear Rh OF T-BOSS 550 E4	1
14	LH00048106	Bushing,Long OF T-BOSS 550 E4	4
15	LH00048068	Shaft,Rear Upper Arm OF T-BOSS 550 E4	2
16	LH00048071	Scr Hxfl, Rear Upper Arm OF T-BOSS 550 E4	2
17	LH00070287	Square Rubber Plug OF T-BOSS 550 E4	4
18	LH00048072	Arm Lwr Rear Lh OF T-BOSS 550 E4	1
19	LH00048076	Arm Lwr Rear Rh OF T-BOSS 550 E4	1
20	LH00048073	Plug OF T-BOSS 550 E4	4
21	LH00048069	Shaft,Rear Lwr Arm OF T-BOSS 550 E4	4
22	LH00084251	Cover, Arm Lwr Rear Lh OF T-BOSS 550 E4	1
23	LH00084252	Cover, Arm Lwr Rear Rh OF T-BOSS 550 E4	1
24	LH00011153	Screw M5X10 OF T-BOSS 550 E4	6

 Steering

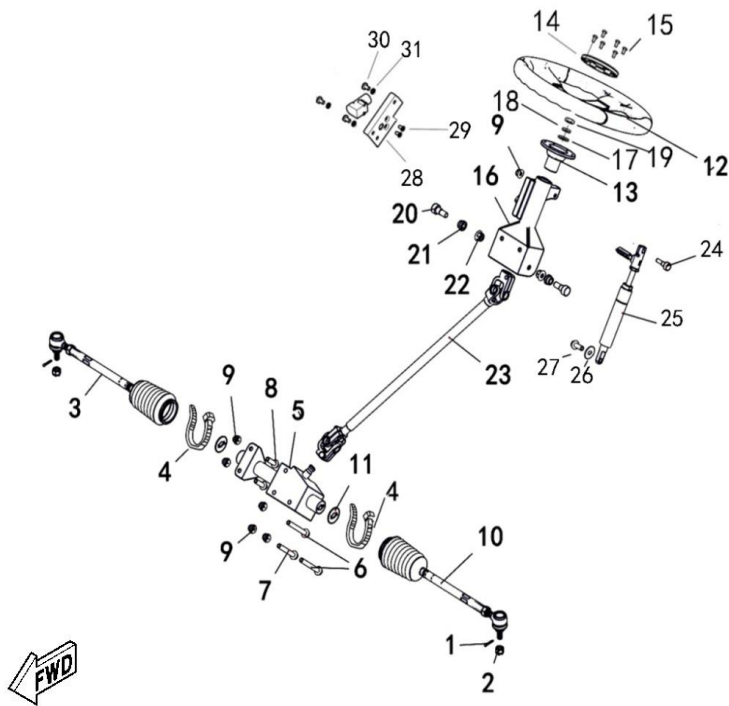


Ref.No.	Part Number	Description	Q'ty
1	LH00010501	Pin 2.5×25 OF T-BOSS 550 E4	2
2	LH00027067	Nut M10X1.25 OF T-BOSS 550 E4	2
3	LH00048102	Steering Tie-Rod,Rh OF T-BOSS 550 E4	1
4	LH00048326	Tie OF T-BOSS 550 E4	2
5	LH00048098	Steering Motor OF T-BOSS 550 E4	1
6	LH00011161	Bolt M8X90 OF T-BOSS 550 E4	2
7	LH00011244	Bolt M8×80 OF T-BOSS 550 E4	1
8	LH00010783	Bolt M8X20 OF T-BOSS 550 E4	2
9	LH00011145	Nut M8 OF T-BOSS 550 E4	6
10	LH00048103	Steering Tie-Rod,Lh OF T-BOSS 550 E4	1
11	LH00048104	Steering Motor Sheet OF T-BOSS 550 E4	2
12	LH00026925	Steering Wheel OF T-BOSS 550 E4	1
13	LH00026932	Steering Wheel Holder OF T-BOSS 550 E4	1
14	LH00026934	Steering Cover OF T-BOSS 550 E4	1
15	LH00010305	Screw M5X10 OF T-BOSS 550 E4	6
16	LH00048097	Steering Column Assy. OF T-BOSS 550 E4	1
17	LH00010032	Washer 12 OF T-BOSS 550 E4	1
18	LH00010054	Washer Spring 12 OF T-BOSS 550 E4	1
19	LH00026257	Nut M12 OF T-BOSS 550 E4	1
20	LH00073143	Shoulder Bolt M10×1.25×30 OF T-BOSS 550 E4	2
21	LH00073125	Bushing For Adjustable Steering Wheel OF T-BOSS 550 E4	2
22	LH00010795	Nut M10 OF T-BOSS 550 E4	2
23	LH00048194	Shaft Steering OF T-BOSS 550 E4	1
24	LH00073119	Shoulder Bolt M8×1.25×30 OF T-BOSS 550 E4	1

 Wheel Front

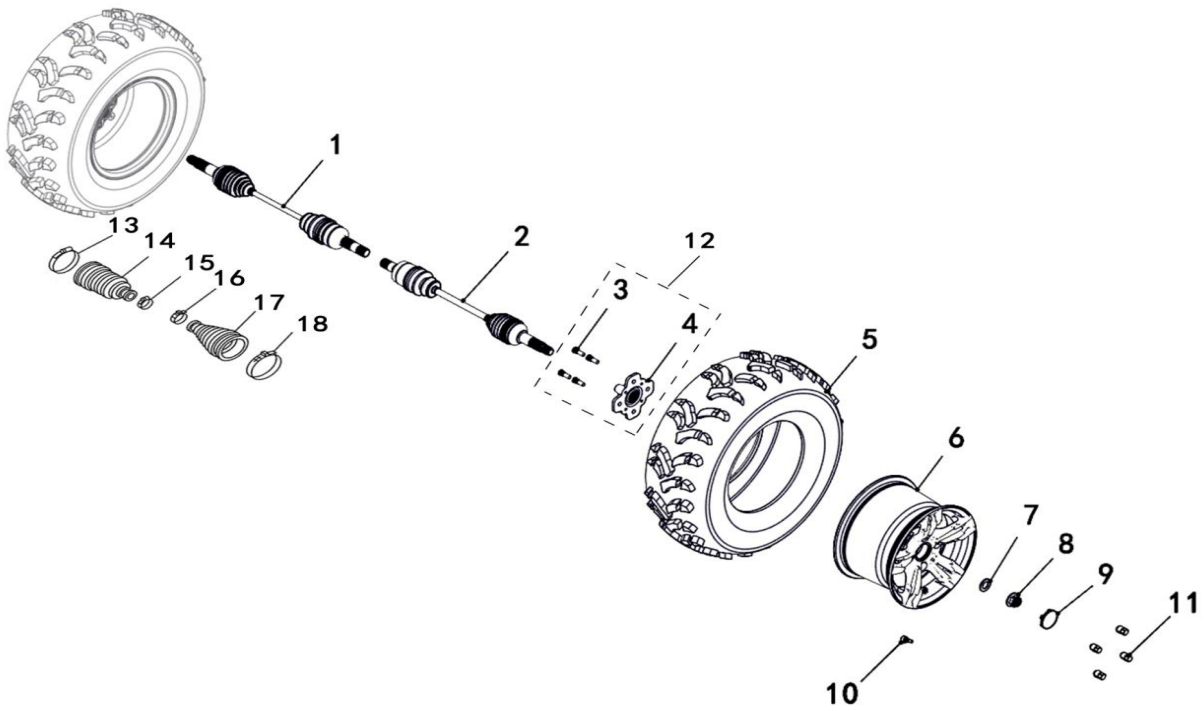


Ref.No.	Part Number	Description	Q'ty
1	LH00048355	Front Right Drive Axle OF T-BOSS 550 E4	1
2	LH00048356	Front Left Drive Axle OF T-BOSS 550 E4	1
3	LH00048155	Bolt M10X1.25 OF T-BOSS 550 E4	8
4	LH00048156	Hub Assy Shrt OF T-BOSS 550 E4	2
5	LH00048374	Tire Front(E4-75R-0012911) OF T-BOSS 550 E4	2
6	LH00047050	Wheel Sub-Assy OF T-BOSS 550 E4	2
7	LH00048163	Washer 24 OF T-BOSS 550 E4	2
8	LH00048157	Nut M24, Wheel OF T-BOSS 550 E4	2
9	LH00036162	Cap, Wheel Sub-Assy OF T-BOSS 550 E4	2
10	LH0020807a	Valve, Rim (Tr412) OF T-BOSS 550 E4	2
11	LH00048154	Nut M10×1.25, Wheel OF T-BOSS 550 E4	8
12	LH00048347	Hub For Steel Wheel Assy	2
13	LH00048570	Clip 1	2
14	LH00048571	BOOT (outside)	2
15	LH00048572	Clip 2	2
16	LH00048573	Clip 3	2
17	LH00048574	BOOT (inner side)	2
18	LH00048575	Clip 4	2

 Wheel Rear

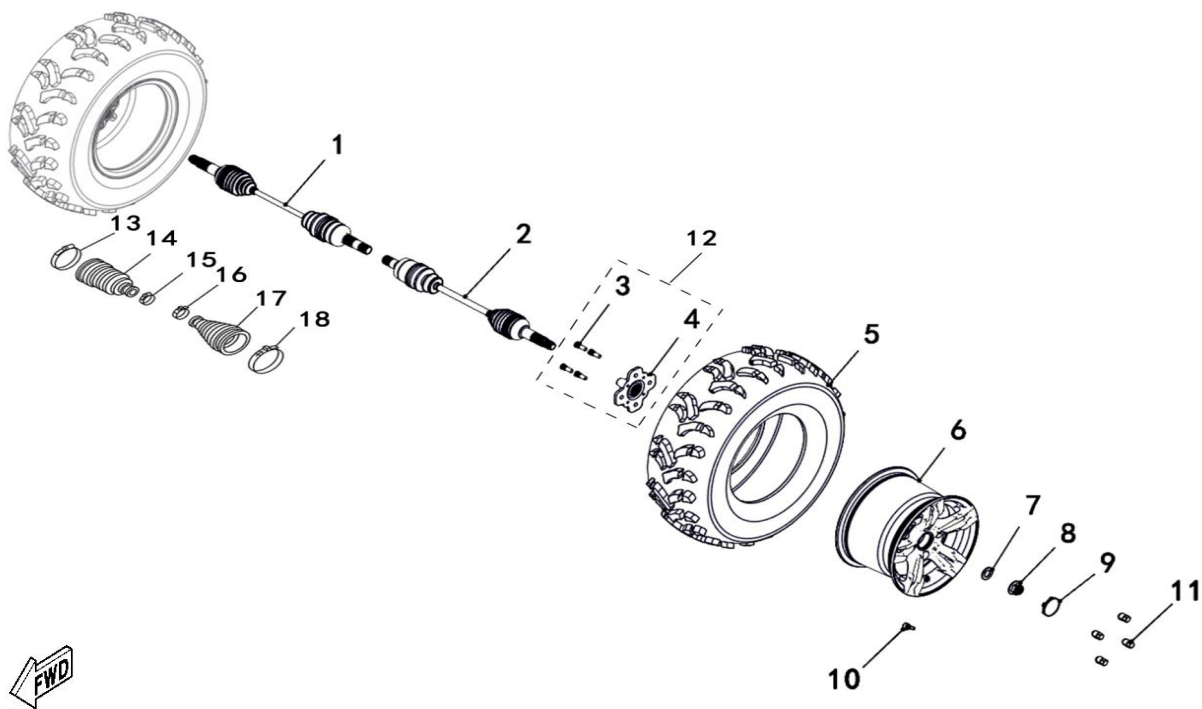


Ref.No.	Part Number	Description	Q'ty
1	LH00048167	Rear Right Drive Axle OF T-BOSS 550 E4	1
2	LH00048166	Rear Left Drive Axle OF T-BOSS 550 E4	1
3	LH00048155	Bolt M10X1.25 OF T-BOSS 550 E4	8
4	LH00048156	Hub Assy Shrt OF T-BOSS 550 E4	2
5	LH00048375	Tire Rear(E4-75R-0012912) OF T-BOSS 550 E4	2
6	LH00047052	Wheel Sub-Assy OF T-BOSS 550 E4	2
7	LH00048163	Washer 24 OF T-BOSS 550 E4	2
8	LH00048157	Nut M24, Wheel OF T-BOSS 550 E4	2
9	LH00036162	Cap, Wheel Sub-Assy OF T-BOSS 550 E4	2
10	LH0020807a	Valve, Rim (Tr412) OF T-BOSS 550 E4	2
11	LH00048154	Nut M10×1.25, Wheel OF T-BOSS 550 E4	8
13	LH00048570	Clip 1	2
14	LH00048571	BOOT (outside)	2
15	LH00048572	Clip 2	2
16	LH00048573	Clip 3	2
17	LH00048574	BOOT (inner side)	2
18	LH00048575	Clip 4	2

 Fuel Tank, Steel

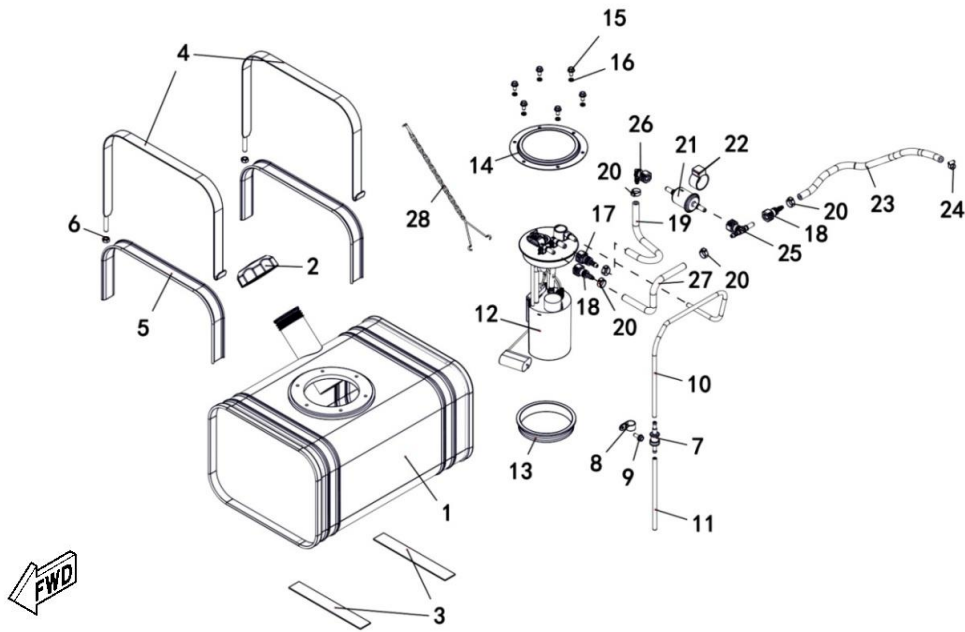


Ref.No.	Part Number	Description	Q'ty
1	LH00048120	Fuel Tank Comp Steel OF T-BOSS 550 E4	1
2	LH00071972	Cap Fuel Tank OF T-BOSS 550 E4	1
3	LH00073051	Rubber Damper OF T-BOSS 550 E4	2
4	LH00048121	Strap For Steel Fuel Tank Mounting OF T-BOSS 550 E4	2
5	LH00073052	Rubber Strap OF T-BOSS 550 E4	2
6	LH00011145	Nut M8 OF T-BOSS 550 E4	2
7	LH00025037	Rollover Valve OF T-BOSS 550 E4	1
8	LH0880.021	Bracket, Rollover Valve OF T-BOSS 550 E4	1
9	LH00010183	Bolt M6X16 OF T-BOSS 550 E4	1
10	LH00048032	Hose 1 OF T-BOSS 550 E4	1
11	LH00048033	Hose 2 OF T-BOSS 550 E4	1
12	LH00048124	Fuel Pump OF T-BOSS 550 E4	1
13	LH00073154	Sealing For Fuel Pump_Steel Tank OF T-BOSS 550 E4	1
14	LH00073149	Bracket For Fuel Pump OF T-BOSS 550 E4	1
15	LH00010087	Bolt M6X10 OF T-BOSS 550 E4	6
16	LH00011019	Washer Spring 6 OF T-BOSS 550 E4	6
17	LH00073145	Quick Fitting Assy 9.49 OF T-BOSS 550 E4	1
18	LH00073146	Quick Fitting Assy 7.89 OF T-BOSS 550 E4	2
19	LH00048029	Fuel Line 1 OF T-BOSS 550 E4	1
20	LH00048122	Clip 14.6 OF T-BOSS 550 E4	5
21	LH00048318	Fuel Filer OF T-BOSS 550 E4	1
22	LH00048415	Fuel Filer Support OF T-BOSS 550 E4	1
23	LH00048030	Fuel Line 2 OF T-BOSS 550 E4	1
24	LH00071658	Clamp 8/14 OF T-BOSS 550 E4	1

 Shift Shaft (OLD MODEL USED FOR THE VEHICLE BEFORE 2019.02)

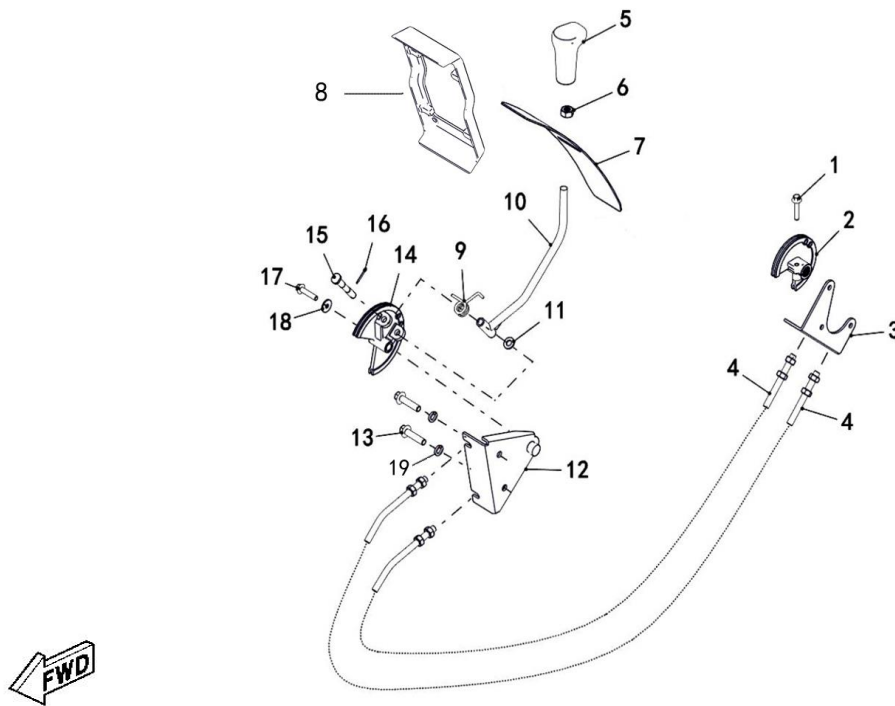


Ref.No.	Part Number	Description	Q'ty
1	LH00010187	Bolt M6×25 OF T-BOSS 550 E4	1
2	LH00048051	Shifting Anchor Plate OF T-BOSS 550 E4	1
3	LH00048052	Shift Board OF T-BOSS 550 E4	1
4	LH00048048	Cable, Shifter OF T-BOSS 550 E4	2
5	LH00048045	Knob Shifter OF T-BOSS 550 E4	1
6	LH00010657	Nut M10 OF T-BOSS 550 E4	1
7	LH00048053	Cover, Dust OF T-BOSS 550 E4	1
8	LH00048350	Shift Guard Plate Support Plate OF T-BOSS 550 E4	1
9	LH00048047	Spring, Shifting OF T-BOSS 550 E4	1
10	LH00048044	Gearshifter OF T-BOSS 550 E4	1
11	LH00011168	Washr 8 OF T-BOSS 550 E4	1
12	LH00048049	Shift Mounting Plate Assembly OF T-BOSS 550 E4	1
13	LH00010783	Bolt M8×20 OF T-BOSS 550 E4	2
14	LH00048050	Front Shift Line Disc OF T-BOSS 550 E4	1
15	LH00048046	Pin, Gearshifter OF T-BOSS 550 E4	1
16	LH00010685	Cotter Pin 2X16 OF T-BOSS 550 E4	1
17	LH0010140B	Bolt M6×12 OF T-BOSS 550 E4	1
18	LH00011246	Spring Retainer 6 OF T-BOSS 550 E4	1
19	LH00010106	Spring Washr 8 OF T-BOSS 550 E4	2

 Shift Shaft (NEW MODEL START TO USE AFTER 2019.02)

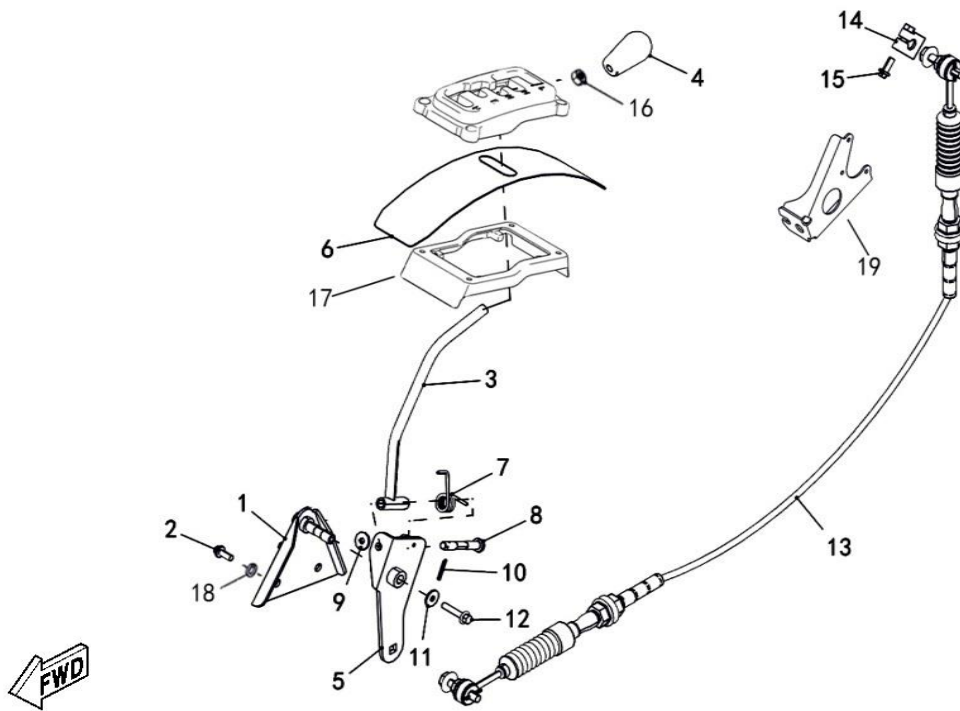


Ref.No.	Part Number	Description	Q'ty
1	LH00048442	Shift Mounting Plate Assembly OF T-BOSS 550 E4	1
2	LH00010783	Bolt M6×25 OF T-BOSS 550 E4	2
3	LH00073705	Shift Board OF T-BOSS 550 E4	1
4	LH00048045	Knob Shifter OF T-BOSS 550 E4	1
5	LH00073706	Front Shift Rocker Arm OF T-BOSS 550 E4	1
6	LH00048053	Cover, Dust OF T-BOSS 550 E4	1
7	LH00048047	Spring, Shifting OF T-BOSS 550 E4	1
8	LH00048046	Pin, Gearshifter OF T-BOSS 550 E4	1
9	LH00011168	Washr 8 OF T-BOSS 550 E4	1
10	LH00010685	Cotter Pin 2X16 OF T-BOSS 550 E4	1
11	LH00011246	Spring Retainer 6 OF T-BOSS 550 E4	1
12	LH0010140B	Bolt M6×12 OF T-BOSS 550 E4	1
13	LH00048443	Cable, Shifter OF T-BOSS 550 E4	1
14	LH00048444	Rocker OF T-BOSS 550 E4	1
15	LH00010187	Bolt M6×25 OF T-BOSS 550 E4	1
16	LH00010657	Nut M10 OF T-BOSS 550 E4	1
17	LH00048350	Shift Guard Plate Support Plate OF T-BOSS 550 E4	1
18	LH00010106	Washer Spring 8 OF T-BOSS 550 E4	2
19	LH00048445	Bracket OF T-BOSS 550 E4	1

 Box Assy

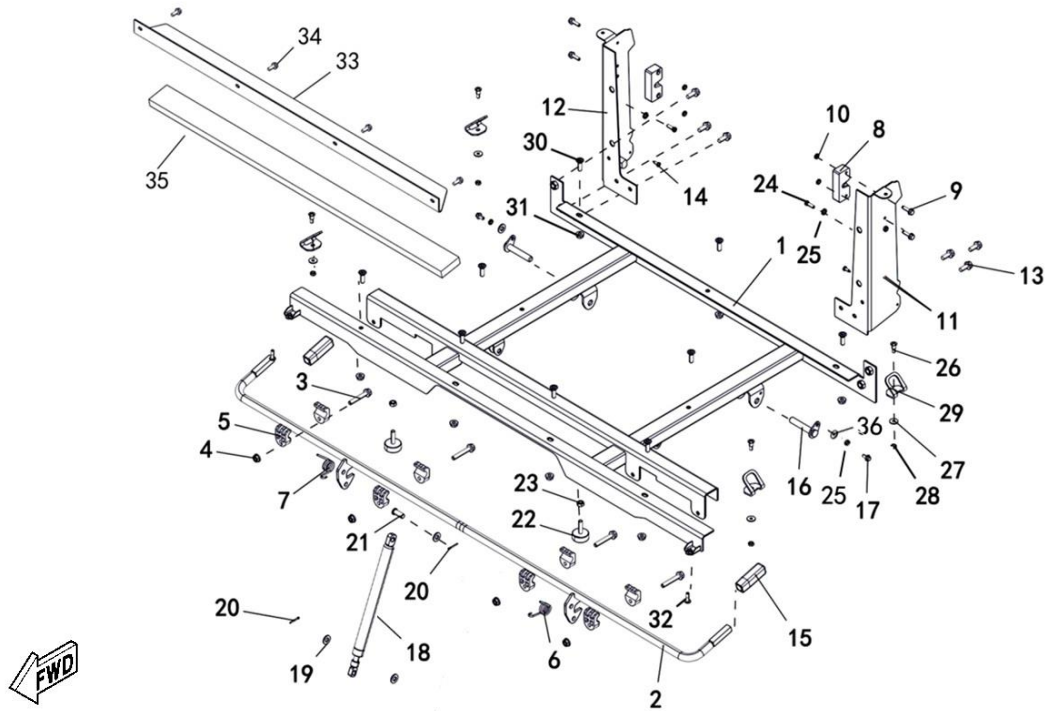


Ref.No.	Part Number	Description	Q'ty
1	LH00048132	Box Floor Cover OF T-BOSS 550 E4	1
2	LH00048133	Cargo Handle Ass'Y OF T-BOSS 550 E4	1
3	LH00011101	Bolt M8X45 OF T-BOSS 550 E4	4
4	LH00011145	Nut M8 OF T-BOSS 550 E4	4
5	LH00048134	Rubber Sheath OF T-BOSS 550 E4	8
6	LH00048135	Pedal Spring ,L OF T-BOSS 550 E4	1
7	LH00048136	Pedal Spring ,R OF T-BOSS 550 E4	1
8	LH00048139	Lock Seat,Rear Trunk OF T-BOSS 550 E4	2
9	LH00010278	Bolt M6X22 OF T-BOSS 550 E4	4
10	LH00010104	Nut M6 OF T-BOSS 550 E4	4
11	LH00048142	Rear Side Protecting Plate,Lh OF T-BOSS 550 E4	1
12	LH00048143	Rear Side Protecting Plate,Rh OF T-BOSS 550 E4	1
13	LH00010783	Bolt M8X20 OF T-BOSS 550 E4	6
14	LH00048316	Tapping Screw M5 x16 OF T-BOSS 550 E4	2
15	LH00047061	Cap,Protector End OF T-BOSS 550 E4	2
16	LH00048313	Pin Shaft ,Rotation OF T-BOSS 550 E4	2
17	LH0010140B	Bolt M6X12 OF T-BOSS 550 E4	2
18	LH00048393	Damper OF T-BOSS 550 E4	1
19	LH00010089	Washer 10 OF T-BOSS 550 E4	3
20	LH00010021	Pin 2.5x20 OF T-BOSS 550 E4	2
21	LH00073161	Pin Axle OF T-BOSS 550 E4	1
22	LH00048151	Damper, Cargo Box Adjusting OF T-BOSS 550 E4	2
23	LH00011176	Nut M6 OF T-BOSS 550 E4	2
24	LH00048147	Bolt OF T-BOSS 550 E4	2

 Electrical

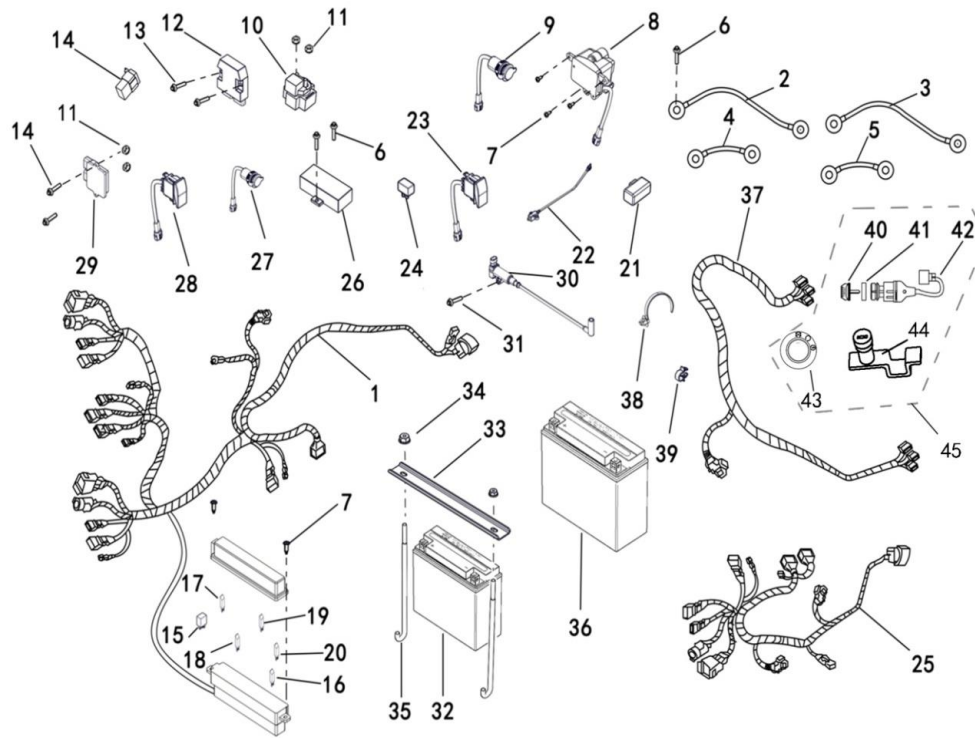


Ref.No.	Part Number	Description	Q'ty
1	LH00048299	Wiring Harness OF T-BOSS 550 E4	1
2	LH00048301	Cable Of Starting Motor OF T-BOSS 550 E4	1
3	LH00048302	Cable Of Battery Negative OF T-BOSS 550 E4	1
4	LH00048303	Cable Of Battery Positive OF T-BOSS 550 E4	1
5	LH00048304	Cable Of Frame OF T-BOSS 550 E4	1
6	LH00010183	Bolt M6×16 OF T-BOSS 550 E4	5
7	LH00048316	Tapping Screw M5×16 OF T-BOSS 550 E4	5
8	LH00026434	2WD/4WD Switch OF T-BOSS 550 E4	1
9	LH00070400	Accessory Socket Assy OF T-BOSS 550 E4	1
10	LH00071602	Starting Relay OF T-BOSS 550 E4	1
11	LH00011233	Nut M6 OF T-BOSS 550 E4	4
12	LH00071603	Rectifier Regulator OF T-BOSS 550 E4	1
13	LH00010182	Bolt M6×30 OF T-BOSS 550 E4	4
14	LH00035088	Reversing Buzzer OF T-BOSS 550 E4	1
15	LH00035083	Auxiliary Relay OF T-BOSS 550 E4	7
16	LH00048360	5 AMP Fuse OF T-BOSS 550 E4	1
17	LH00048361	10 AMP Fuse OF T-BOSS 550 E4	1
18	LH00048362	15 AMP Fuse OF T-BOSS 550 E4	4
19	LH00048363	20 AMP Fuse OF T-BOSS 550 E4	1
20	LH00084275	30 AMP Fuse OF T-BOSS 550 E4	1
21	LH00071474	EFI Relay OF T-BOSS 550 E4	1
22	LH00048293	Parking Switch OF T-BOSS 550 E4	1
23	LH00073436	High/Low Beam Switch (Options) OF T-BOSS 550 E4	1
24	LH00026272	Protector OF T-BOSS 550 E4	2

 Electrical

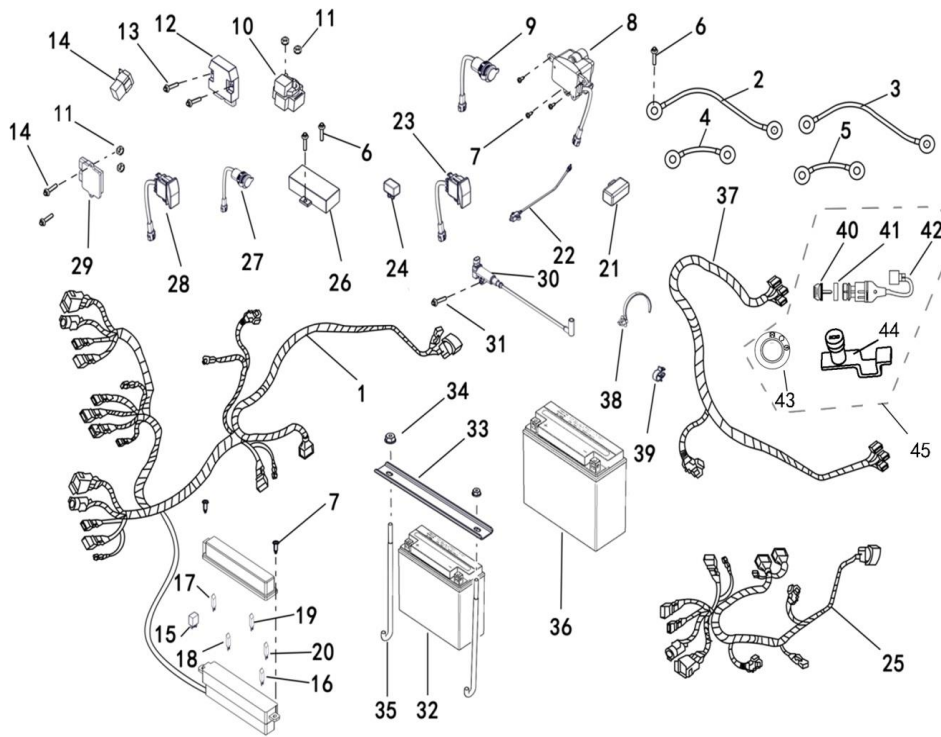


Ref.No.	Part Number	Description	Q'ty
25	LH00048300	Wiring Harness For EFI OF T-BOSS 550 E4	1
26	LH00048305	Solenoid Valve Controller OF T-BOSS 550 E4	1
27	LH00036120	Accessory Socket Assy For USB OF T-BOSS 550 E4	1
28	LH00073306	Rear DIFF Switch OF T-BOSS 550 E4	1
29	LH00048394	ECU OF T-BOSS 550 E4	1
30	LH0070822D	Ignition Coil OF T-BOSS 550 E4	1
31	LH00011260	Bolt M6x40 OF T-BOSS 550 E4	1
33	LH00048327	Plate For Battery OF T-BOSS 550 E4	1
34	LH00011145	Nut M8 OF T-BOSS 550 E4	2
35	LH00048067	Fastening Rod Of Battery OF T-BOSS 550 E4	2
37	LH00048395	Taillight Transition Line (For E4) OF T-BOSS 550 E4	1
38	LH00048294	Tie OF T-BOSS 550 E4	14
39	LH00048191	Buckle OF T-BOSS 550 E4	9
40	LH00048297	Key OF T-BOSS 550 E4	2
41	LH00048296	THREADED NUT OF T-BOSS 550 E4	1
42	LH00048295	Ignition Lock OF T-BOSS 550 E4	1
43	LH00048380	Lock Decal OF T-BOSS 550 E4	1
44	LH00048396	Directional Lock OF T-BOSS 550 E4	1
45	LH00048397	Lock Assembly OF T-BOSS 550 E4	1

 Brake System

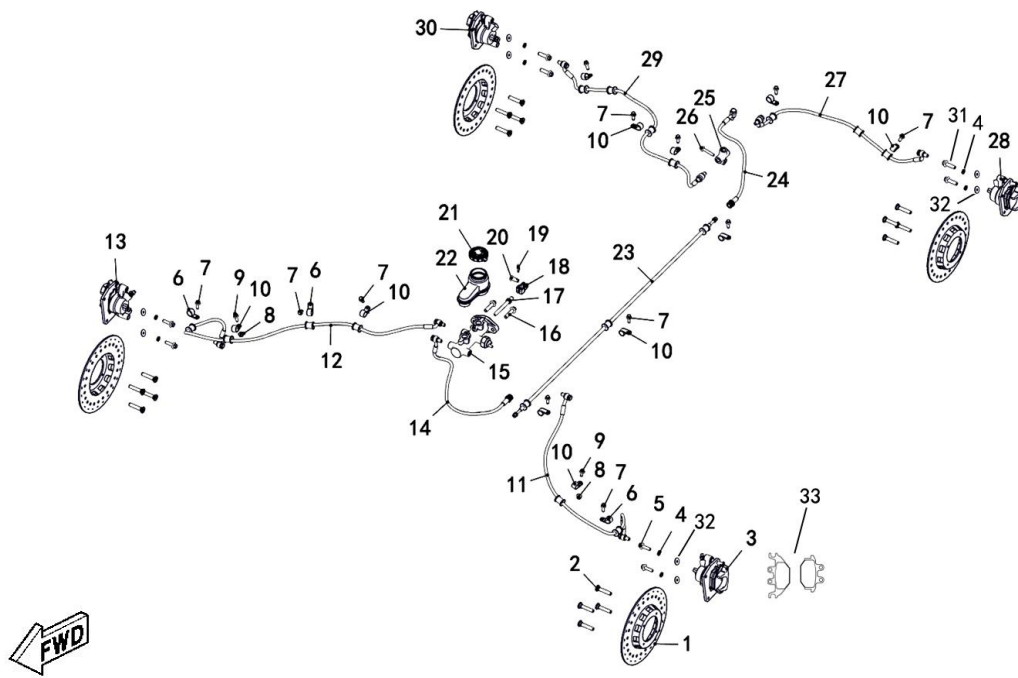


Ref.No.	Part Number	Description	Q'ty
1	LH00048181	Brake Rotor, Driver OF T-BOSS 550 E4	4
2	LH00048000	Bolt, Brake Rotor OF T-BOSS 550 E4	16
3	LH00048173	Brake Caliper, Left, Front OF T-BOSS 550 E4	1
4	LH00010106	Spring 8 OF T-BOSS 550 E4	8
5	LH00010105	Bolt M8x25 (10.9) OF T-BOSS 550 E4	4
6	LH00048182	Clamp 1 OF T-BOSS 550 E4	3
7	LH00010183	Bolt M6X16 OF T-BOSS 550 E4	12
8	LH00011233	Nut M6 OF T-BOSS 550 E4	2
9	LH00010110	Bolt M6x20 OF T-BOSS 550 E4	2
10	LH00048183	Clamp 2 OF T-BOSS 550 E4	11
11	LH00048180	Hose 1 OF T-BOSS 550 E4	1
12	LH00048184	Hose 2 OF T-BOSS 550 E4	1
13	LH00048174	Brake Caliper, Right, Front OF T-BOSS 550 E4	1
14	LH00048185	Hose 3 OF T-BOSS 550 E4	1
15	LH00048175	Master Cylinder OF T-BOSS 550 E4	1
16	LH00010059	Bolt M8x25 OF T-BOSS 550 E4	2
17	LH00048003	Push Rod OF T-BOSS 550 E4	1
18	LH00073090	Clevis OF T-BOSS 550 E4	1
19	LH00010094	Cotter Pin 2X20 OF T-BOSS 550 E4	1
20	LH00073091	Clevis Pin OF T-BOSS 550 E4	1
21	LH00048179	Brake Reservoir, Cover OF T-BOSS 550 E4	1
22	LH00048178	Brake Reservoir OF T-BOSS 550 E4	1
23	LH00048190	Tube OF T-BOSS 550 E4	1
24	LH00048186	Hose 4 OF T-BOSS 550 E4	1
25	LH00048187	Fitting, Tee OF T-BOSS 550 E4	1

 Options

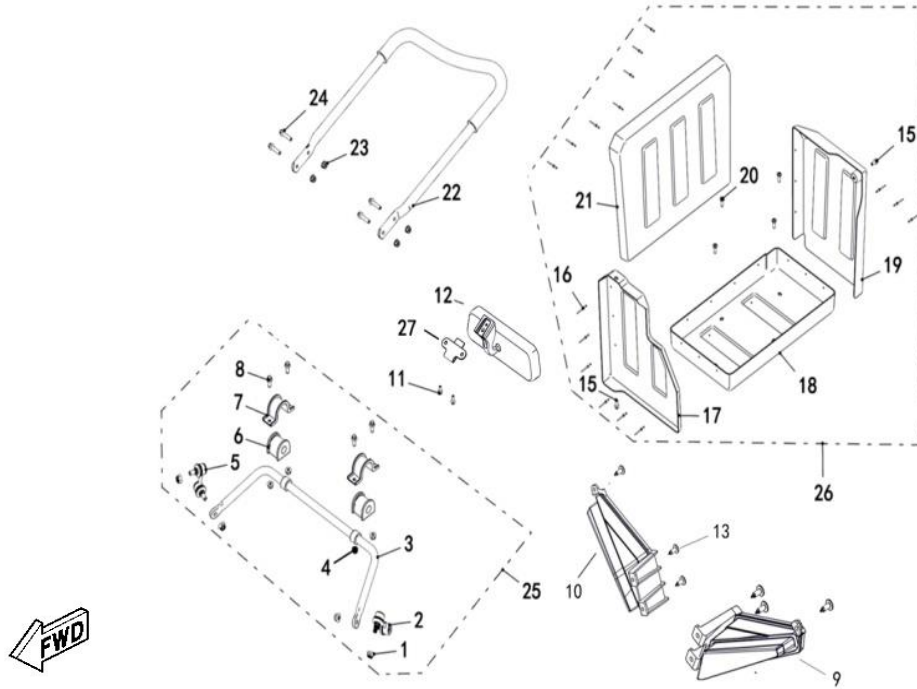


Ref.No.	Part Number	Description	Q'ty
1	LH00010795	Nut M10 OF T-BOSS 550 E4	4
2	LH00048081	Ball Pin, Lh OF T-BOSS 550 E4	1
3	LH00048078	Front Stabilizer Bar OF T-BOSS 550 E4	1
4	LH00011145	Nut M8 OF T-BOSS 550 E4	4
5	LH00048080	Ball Pin, Rh OF T-BOSS 550 E4	1
6	LH00027091	Rubber Support Seat OF T-BOSS 550 E4	2
7	LH00027090	Retaining Cover OF T-BOSS 550 E4	2
8	LH00010783	Bolt M8x20 OF T-BOSS 550 E4	4
9	LH00048400	LED Decorative Light, L OF T-BOSS 550 E4	1
10	LH00048401	LED Decorative Light, R OF T-BOSS 550 E4	1
11	LH00010183	Bolt M6x16 OF T-BOSS 550 E4	2
12	LH00048006	Center Mirror Kit OF T-BOSS 550 E4	1
12	LH00048545	Center Mirror Kit OF T-BOSS 550 E4	1
13	LH00048316	Tapping Screw M5 x16 OF T-BOSS 550 E4	6
15	LH00048269	Bolt M6x16 OF T-BOSS 550 E4	2
16	LH00011256	Core Pulling Rivets 3X10 OF T-BOSS 550 E4	16
17	LH00048261	Tool Box,Before The Baffle OF T-BOSS 550 E4	1
18	LH00048255	Tool Box,Floor OF T-BOSS 550 E4	1
19	LH00048262	Tool Box,Tailgate OF T-BOSS 550 E4	1
20	LH00048270	Screw M6x20 OF T-BOSS 550 E4	4
21	LH00048260	Tool Box,The Side Panel OF T-BOSS 550 E4	1
22	LH00048290	Assist Grip Assy OF T-BOSS 550 E4	1
23	LH00011145	Nut M8 OF T-BOSS 550 E4	4
24	LH00010783	Bolt M8x20 OF T-BOSS 550 E4	4
25	LH00048082	Front Stabilizer Bar OF T-BOSS 550 E4	1
26	LH00048265	Tool Box, Assembly OF T-BOSS 550 E4	1
27	LH00048546	Bracket, Center Mirror Kit OF T-BOSS 550 E4	1

 Licence Bracket - NEW

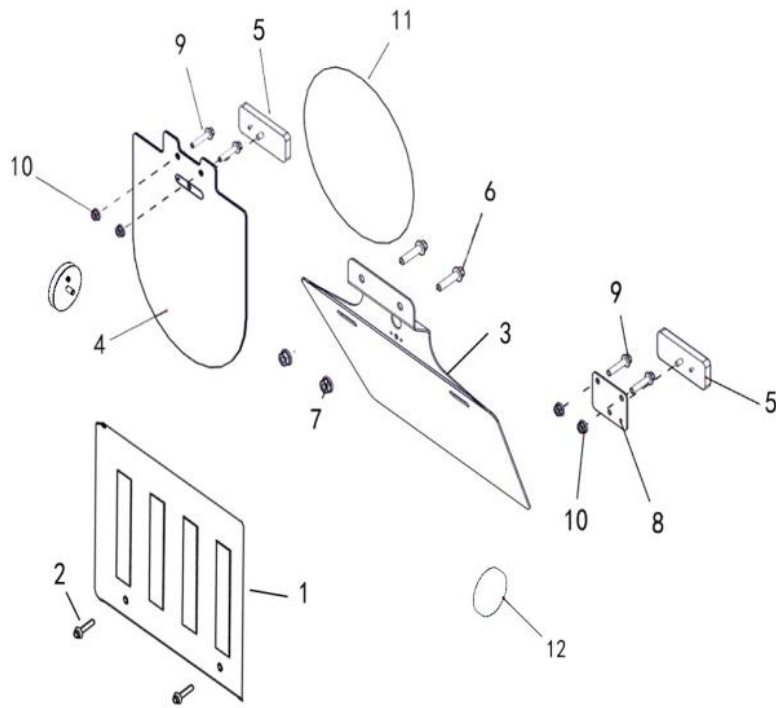


Ref.No.	Part Number	Description	Q'ty
1	LH00055008	Licence Bracket, Front	1
2	LH00010183	Bolt M6×16	2
3	LH00048449	Licence Bracket, Rear	1
4	LH00048406	Speed Limit Bracket	1
5	LH00035705	Rear Reflector	2
6	LH00010783	Bolt M8×20	2
7	LH00010882	Nut M8	2
8	LH00048408	Reflector Bracket	1
9	LH00010110	Bolt M6×20	4
10	LH00011233	Nut M6	4
11	LH00048409	Speed Limit	1
12	LH00048410	Side Reflector	2

 Cylinder Head Cover

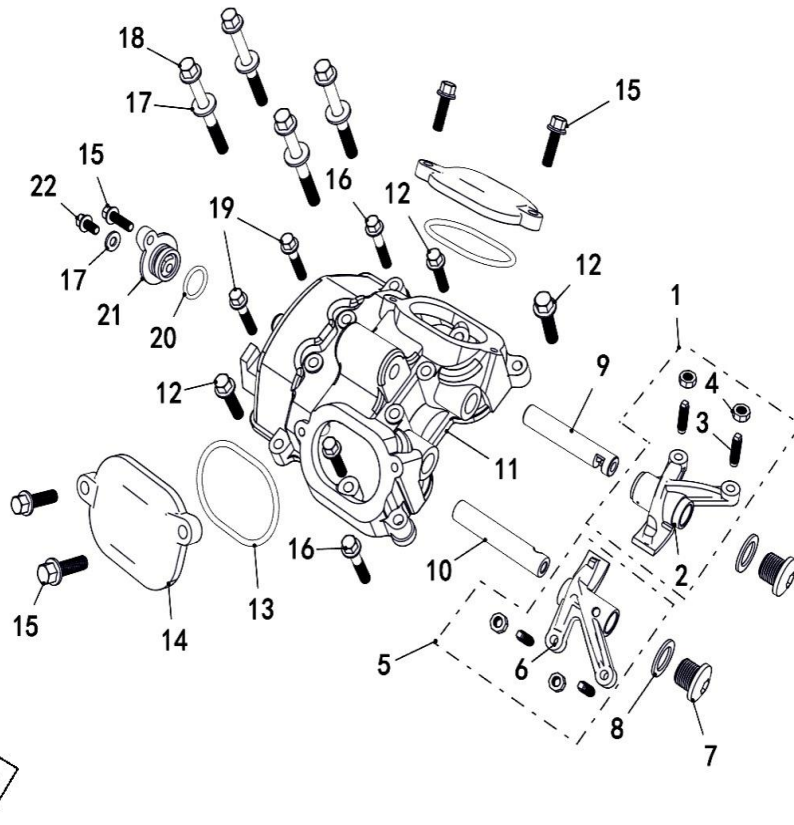


Ref.No.	Part Number		Description	Q'ty
1	35143	LH00035143	Intake Rocker Arm Comp OF T-BOSS 550 E4	1
2	35144	LH00035144	Intake Rocker Arm Valve OF T-BOSS 550 E4	1
3	35146	LH00035146	Adjusting Nut Valve OF T-BOSS 550 E4	4
4	35147	LH00035147	Adjusting Screw Valve OF T-BOSS 550 E4	4
5	35148	LH00035148	Exhaust Rocker Arm Comp OF T-BOSS 550 E4	1
6	35149	LH00035149	Exhaust Rocker Arm Valve OF T-BOSS 550 E4	1
7	35150	LH00035150	Bolt M14×1.25×12 OF T-BOSS 550 E4	2
8	35215	LH00035215	Washer 14 OF T-BOSS 550 E4	2
9	35142	LH00035142	Intake Rocker Shaft OF T-BOSS 550 E4	1
10	35145	LH00035145	Exhaust Rocker Shaft OF T-BOSS 550 E4	1
11	35110	LH00035110	Cylinder Head Cover OF T-BOSS 550 E4	1
12	10187	LH00010187	Bolt M6×25 OF T-BOSS 550 E4	4
13	35111	LH00035111	Gasket OF T-BOSS 550 E4	2
14	35107	LH00035107	Valve Adjust Cover OF T-BOSS 550 E4	2
15	10110	LH00010110	Bolt M6×20 OF T-BOSS 550 E4	5
16	10186	LH00010186	Bolt M6×35 OF T-BOSS 550 E4	2
17	35108	LH00035108	Washer 6 OF T-BOSS 550 E4	5
18	10530	LH00010530	Bolt M6×55 OF T-BOSS 550 E4	4
19	10182	LH00010182	Bolt M6×30 OF T-BOSS 550 E4	2
20	35113	LH00035113	O-Ring 18×2.4 OF T-BOSS 550 E4	1
21	35112	LH00035112	Seal Cover OF T-BOSS 550 E4	1
22	10140	LH00010140	Bolt M6×12 OF T-BOSS 550 E4	1

 Cylinder Head

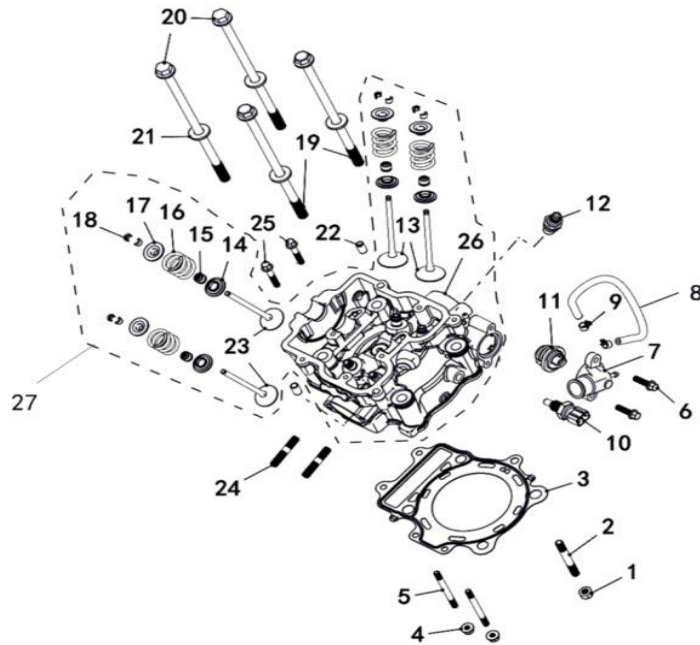


Ref.No.	Part Number	Part Number	Description	Q'ty
1	10067	LH00010067	Thrust Nut M8 OF T-BOSS 550 E4	1
2	35097	LH00035097	Stud M8×68 OF T-BOSS 550 E4	1
3	35106	LH00035106	Gasket,Cylinder Head OF T-BOSS 550 E4	1
4	10004	LH00010004	Thrust Nut M6 OF T-BOSS 550 E4	2
5	35098	LH00035098	Stud M6×72 OF T-BOSS 550 E4	2
6	10278	LH00010278	Bolt M6×22 OF T-BOSS 550 E4	2
7	35103	LH00035103	Water Outlet Joint, Cylinder Head OF T-BOSS 550 E4	1
8	35104	LH00035104	Pipe,Cylinder Head OF T-BOSS 550 E4	1
9	35109	LH00035109	Clip 7.5 OF T-BOSS 550 E4	2
10	35095e	LH0035095e	Water Temperature Sensor OF T-BOSS 550 E4	1
11	35171	LH00035171	Thermostat OF T-BOSS 550 E4	1
12	35105	LH00035105	Spark Plug DPR7EA-9(NGK) OF T-BOSS 550 E4	1
13	35135	LH00035135	Intake Valve OF T-BOSS 550 E4	2
14	35137	LH00035137	Seat Spring Valve OF T-BOSS 550 E4	4
15	35140	LH00035140	Seal Valve Stem OF T-BOSS 550 E4	4
16	35136	LH00035136	Spring Valve OF T-BOSS 550 E4	4
17	35138	LH00035138	Retainer Spring Valve OF T-BOSS 550 E4	4
18	35139	LH00035139	Cotter Valve OF T-BOSS 550 E4	8
19	35100	LH00035100	Cylinder Bolt M10×1.25×190 OF T-BOSS 550 E4	2
20	35101	LH00035101	Cylinder Bolt M10×1.25×200 OF T-BOSS 550 E4	2
21	35102	LH00035102	Washer, Cylinder Bolt OF T-BOSS 550 E4	4
22	50076	LH00050076	Dowel Pin 8×14 OF T-BOSS 550 E4	2
23	35141	LH00035141	EXHAUST VALVE of ATV500-D T3b	2
24	35099	LH00035099	Stud M8×42 OF T-BOSS 550 E4	2
25	10186	LH00010186	Bolt M6×35 OF T-BOSS 550 E4	2
26	35096e	LH0035096e	Cylinder Head OF T-BOSS 550 E4	1
27	48429	LH00048429	Cylinder Head Assy OF T-BOSS 550 E4	1

 Camshaft

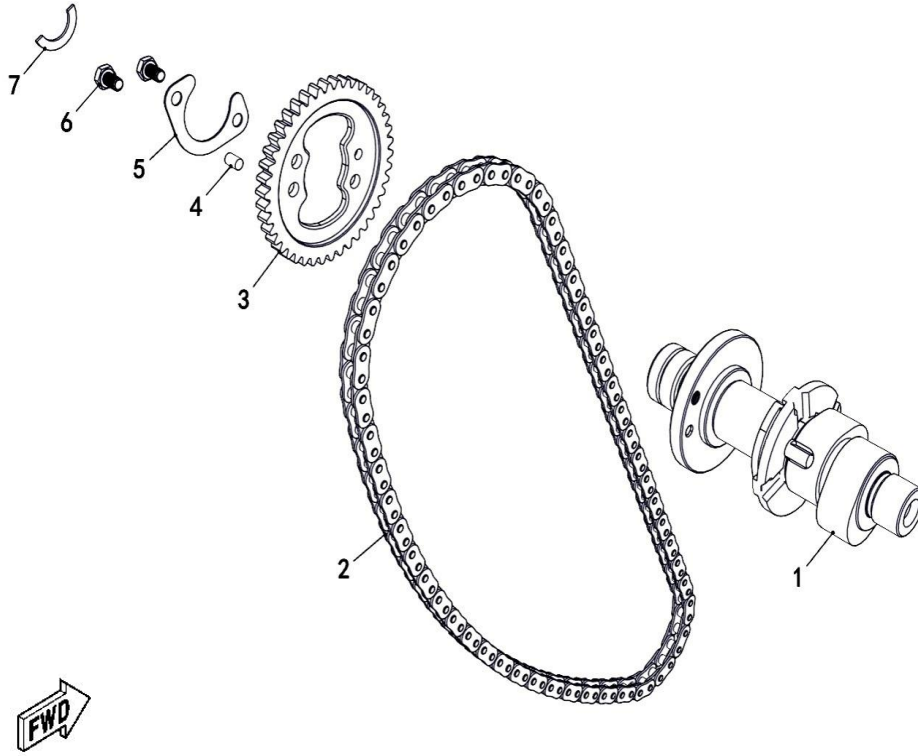


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35156	LH00035156	Camshaft Assembly OF T-BOSS 550 E4	1
2	35163	LH00035163	Timing Chain OF T-BOSS 550 E4	1
3	35154	LH00035154	Timing Sprocket OF T-BOSS 550 E4	1
4	10835	LH00010835	Dowel Pin, Timing Sprocket OF T-BOSS 550 E4	1
5	35153	LH00035153	Retainer OF T-BOSS 550 E4	1
6	10828	LH00010828	Bolt M6×10 OF T-BOSS 550 E4	2
7	35152	LH00035152	Camshaft Spacer OF T-BOSS 550 E4	1

 Cylinder

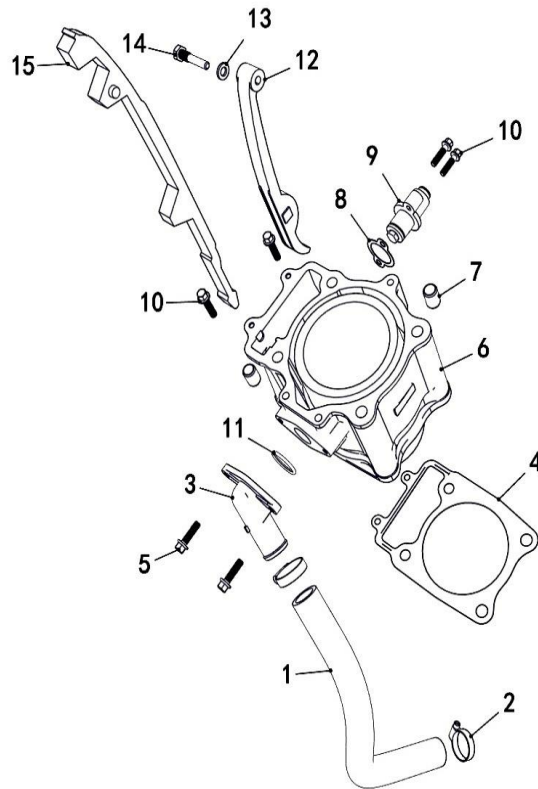


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35116	LH00035116	Water Inlet Hose OF T-BOSS 550 E4	1
2	35343	LH00035343	Clamp 20/32 OF T-BOSS 550 E4	2
3	35114	LH00035114	Joint, Water Inlet OF T-BOSS 550 E4	1
4	35120	LH00035120	Gasket, Cylinder OF T-BOSS 550 E4	1
5	10278	LH00010278	Bolt M6×22 OF T-BOSS 550 E4	2
6	35119	LH00035119	Cylinder OF T-BOSS 550 E4	1
7	35118	LH00035118	Dowel Pin 13×18 OF T-BOSS 550 E4	2
8	35158	LH00035158	Gasket, Tensioner OF T-BOSS 550 E4	1
9	35157	LH00035157	Tensioner OF T-BOSS 550 E4	1
10	10187	LH00010187	Bolt M6×25 OF T-BOSS 550 E4	4
11	35115	LH00035115	O-Ring 24×2.5 OF T-BOSS 550 E4	1
12	35160	LH00035160	Tensioner Plate OF T-BOSS 550 E4	1
13	35162	LH00035162	Washer 8 OF T-BOSS 550 E4	1
14	35161	LH00035161	Bolt, Tensioner Plate OF T-BOSS 550 E4	1
15	35159	LH00035159	Timing Chain Guide OF T-BOSS 550 E4	1

 Crankshaft Comp

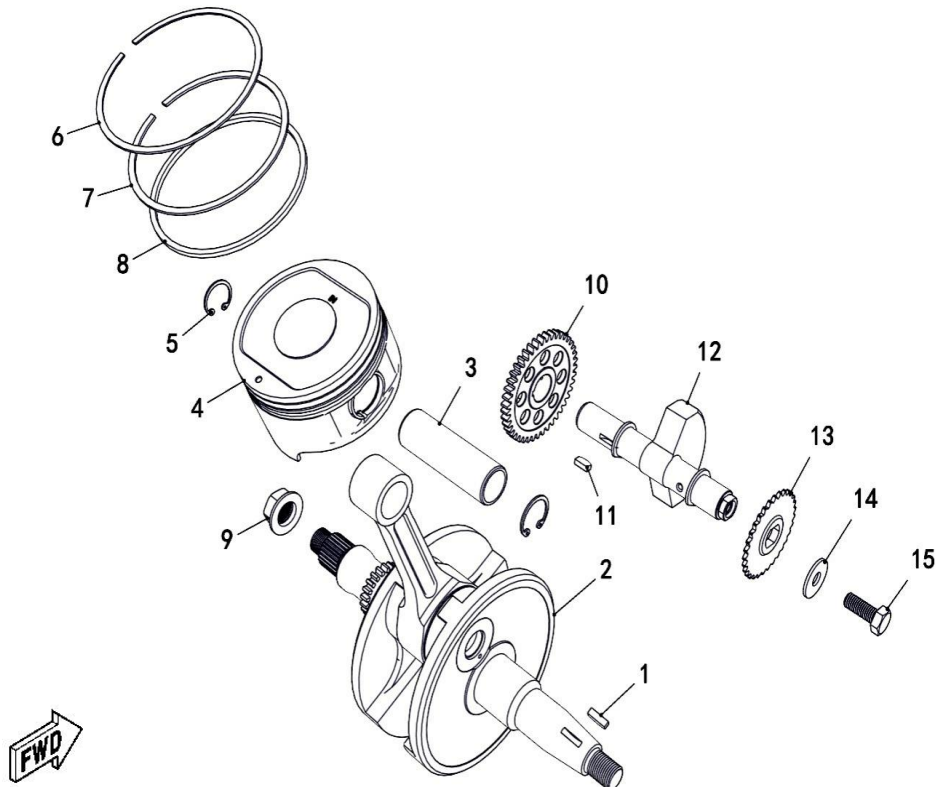


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35133	LH00035133	Key OF T-BOSS 550 E4	1
2	35121A	LH0035121A	Crankshaft OF T-BOSS 550 E4	1
3	35128	LH00035128	Piston Pin OF T-BOSS 550 E4	1
4	35127	LH00035127	Piston OF T-BOSS 550 E4	1
5	35129	LH00035129	Clip, Piston Pin OF T-BOSS 550 E4	2
6	35124	LH00035124	Piston Ring Set OF T-BOSS 550 E4	1
7	35125	LH00035125	2Nd Ring OF T-BOSS 550 E4	±
8	35126	LH00035126	Oil Ring OF T-BOSS 550 E4	±
9	35122	LH00035122	Nut M18×1.5 (L) OF T-BOSS 550 E4	1
10	35131	LH00035131	Gear, Balancer Shaft OF T-BOSS 550 E4	1
11	35123	LH00035123	Key OF T-BOSS 550 E4	1
12	35130	LH00035130	Balancer Shaft OF T-BOSS 550 E4	1
13	35132	LH00035132	Sprocket, Balance Shaft OF T-BOSS 550 E4	1
14	35134	LH00035134	Washer 10.2×28×2 OF T-BOSS 550 E4	1
15	10028	LH00010028	Bolt M10×25 OF T-BOSS 550 E4	1

 Right Crankcase

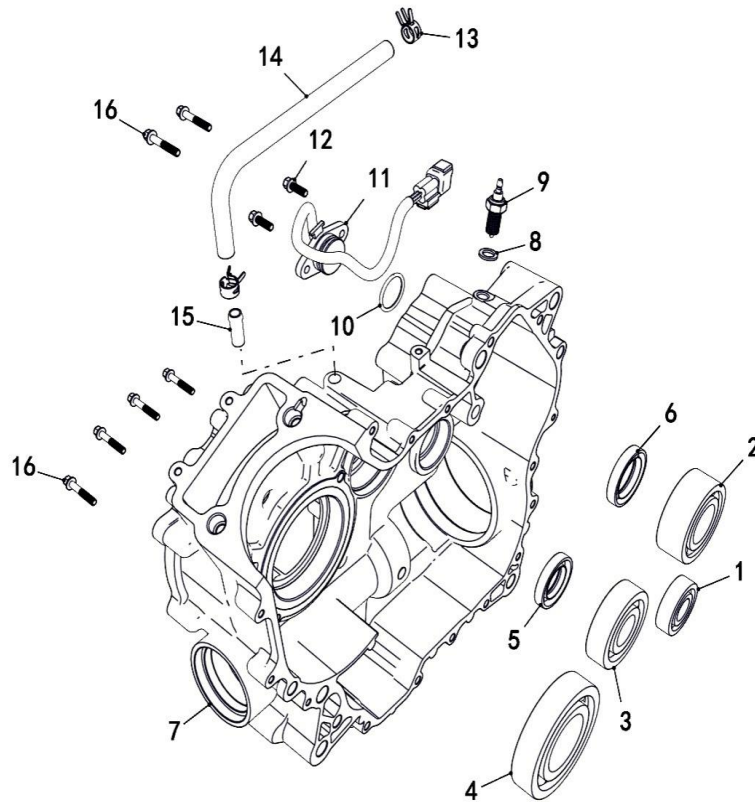


Ref.No.	Part Number	Part Number	Description	Q'ty
1	10851	LH00010851	Bearing 6203RS OF T-BOSS 550 E4	1
2	10860	LH00010860	Bearing 5206C3 OF T-BOSS 550 E4	1
3	10848	LH00010848	Bearing 63/22 OF T-BOSS 550 E4	1
4	10850	LH00010850	Bearing 6208 OF T-BOSS 550 E4	1
5	35218	LH00035218	Oil Seal 22×38×7 OF T-BOSS 550 E4	1
6	35222	LH00035222	Oil Seal 30×45×8 OF T-BOSS 550 E4	1
7	35217	LH00035217	Right Crankcase OF T-BOSS 550 E4	1
8	35227	LH00035227	Washer 10 OF T-BOSS 550 E4	1
9	35339	LH00035339	Reverse Gear Sensor OF T-BOSS 550 E4	1
10	35226	LH00035226	O-Ring 26×2.5 OF T-BOSS 550 E4	1
11	35338	LH00035338	Gear Position Sensor OF T-BOSS 550 E4	1
12	10191	LH00010191	Bolt M6×18 OF T-BOSS 550 E4	2
13	10845	LH00010845	Clamp A12 OF T-BOSS 550 E4	2
14	35220a	LH0035220a	Breather Hose OF T-BOSS 550 E4	1
15	35219	LH00035219	Joint, Breather Hose OF T-BOSS 550 E4	1
16	10186	LH00010186	Bolt M6×35 OF T-BOSS 550 E4	6

 CVT Housing

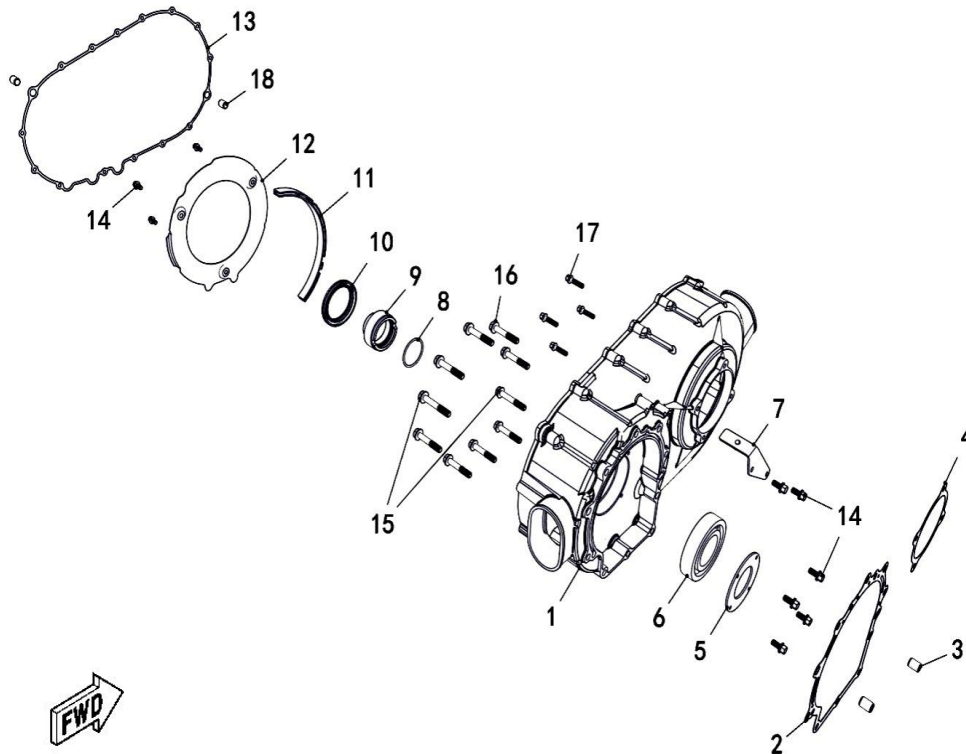


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35235	LH00035235	Cvt Housing OF T-BOSS 550 E4	1
2	35238	LH00035238	Gasket 1, CVT Housing OF T-BOSS 550 E4	1
3	35094	LH00035094	Dowel Pin 10×14 OF T-BOSS 550 E4	2
4	35239	LH00035239	Gasket 2, CVT Housing OF T-BOSS 550 E4	1
5	35236	LH00035236	Bearing Retainer, CVT OF T-BOSS 550 E4	1
6	10852	LH00010852	Bearing 6208RS OF T-BOSS 550 E4	1
7	48028	LH00048028	Plate, Pipe OF T-BOSS 550 E4	1
8	35229	LH00035229	O-Ring 39×2.3 OF T-BOSS 550 E4	1
9	35228	LH00035228	Spacer, Drive Shaft OF T-BOSS 550 E4	1
10	35251	LH00035251	Oil Seal 54×70×8 OF T-BOSS 550 E4	1
11	35533	LH00035533	Rubber Strip OF T-BOSS 550 E4	1
12	35237	LH00035237	Plate, Air Intake OF T-BOSS 550 E4	1
13	35231	LH00035231	Gasket, CVT Cover OF T-BOSS 550 E4	1
14	10140	LH00010140	Bolt M6×12 OF T-BOSS 550 E4	9
15	35232	LH00035232	Bolt M8×50 OF T-BOSS 550 E4	2
16	35233	LH00035233	Bolt M8×45 OF T-BOSS 550 E4	8
17	10187	LH00010187	Bolt M6×25 OF T-BOSS 550 E4	4
18	35118	LH00035118	Dowel Pin 13×18 OF T-BOSS 550 E4	2

 CVT Cover

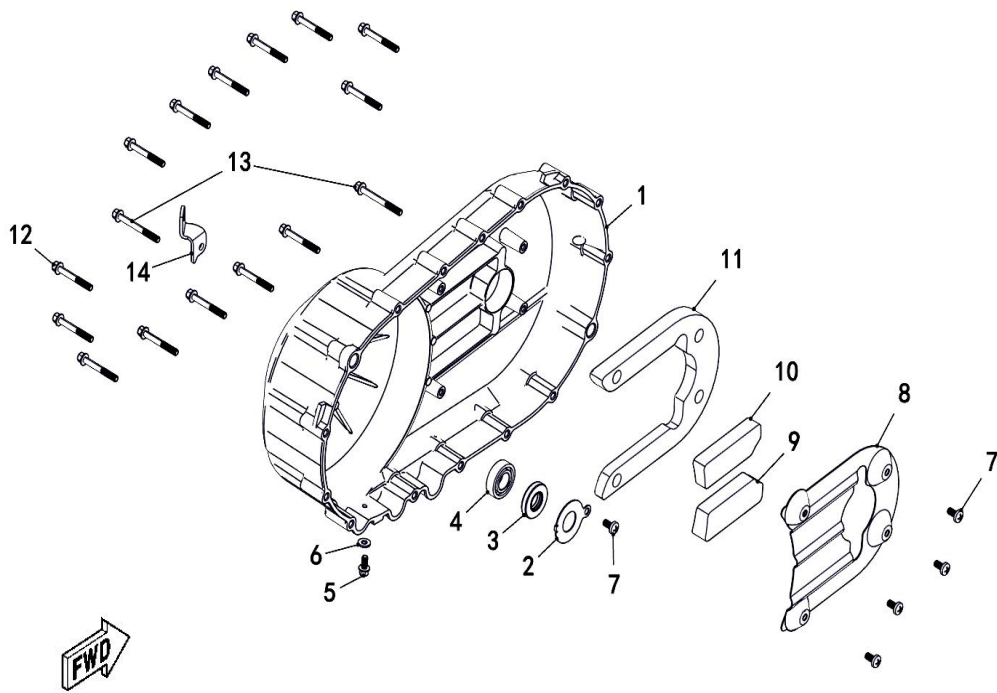


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35230	LH00035230	CVT Cover OF T-BOSS 550 E4	1
2	35253	LH00035253	Limitator, Oil Seal OF T-BOSS 550 E4	1
3	35252	LH00035252	Oil Seal 17×35×5 OF T-BOSS 550 E4	1
4	10853	LH00010853	Bearing 6003/P6 OF T-BOSS 550 E4	1
5	10826	LH00010826	Bolt M6×10 OF T-BOSS 550 E4	1
6	35108	LH00035108	Washer 6 OF T-BOSS 550 E4	1
7	26262	LH00026262	Screw M6×12 OF T-BOSS 550 E4	5
8	35254	LH00035254	Damper Plate OF T-BOSS 550 E4	1
9	35257	LH00035257	Rubber Damper 3 OF T-BOSS 550 E4	1
10	35255	LH00035255	Rubber Damper 1 OF T-BOSS 550 E4	1
11	35256	LH00035256	Rubber Damper 2 OF T-BOSS 550 E4	1
12	29503	LH00029503	Bolt M6×45 OF T-BOSS 550 E4	14
13	10530	LH00010530	Bolt M6×55 OF T-BOSS 550 E4	2
14	48012	LH00048012	Connecting Plate, Air Shroud OF T-BOSS 550 E4	1

 Left Crankcase Cover

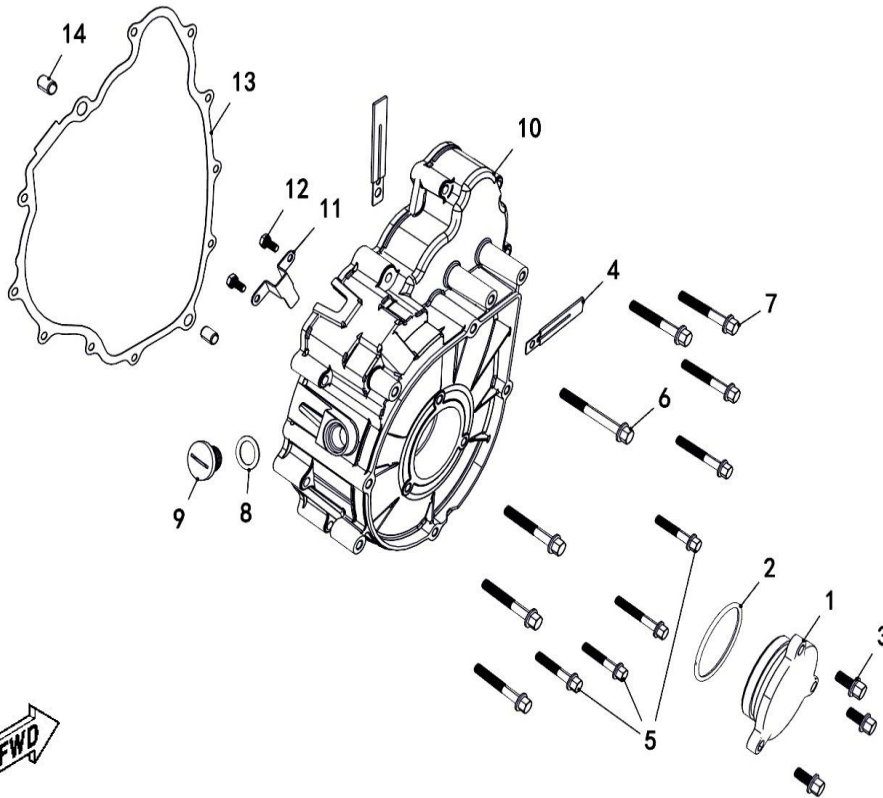


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35537	LH00035537	End Cap OF T-BOSS 550 E4	1
2	10039	LH00010039	O-Ring 46.5X2.65 OF T-BOSS 550 E4	1
3	10140	LH00010140	Bolt M6×12 OF T-BOSS 550 E4	3
4	35247	LH00035247	Cable Clamp OF T-BOSS 550 E4	2
5	10329	LH00010329	Bolt M6×32 OF T-BOSS 550 E4	3
6	10349	LH00010349	Bolt M6×50 OF T-BOSS 550 E4	1
7	10177	LH00010177	Bolt M6×40 OF T-BOSS 550 E4	8
8	35250	LH00035250	O-Ring 12X2.8 OF T-BOSS 550 E4	1
9	35249	LH00035249	Plug, Inspection OF T-BOSS 550 E4	1
10	35234	LH00035234	Left Crankcase Cover OF T-BOSS 550 E4	1
11	35246	LH00035246	Lead Holder OF T-BOSS 550 E4	1
12	10829	LH00010829	Bolt M5×10 OF T-BOSS 550 E4	2
13	35244	LH00035244	Gasket, Left Crankcase Cover OF T-BOSS 550 E4	1
14	35094	LH00035094	Dowel Pin 10×14 OF T-BOSS 550 E4	2

 Generator

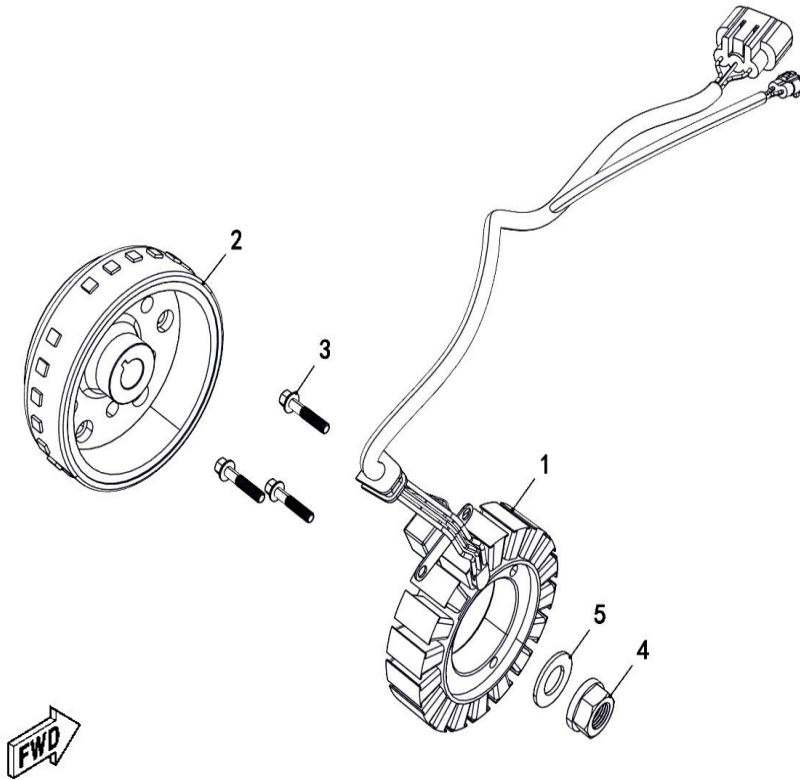


Ref.No.	Part Number	Part Number	Description	Q'ty
±	35334	LH00035334	Stator Assy OF T-BOSS 550 E4	±
1	35334e	LH0035334e	STATOR ASSY NEW	1
2	35335	LH00035335	Rotor Assy OF T-BOSS 550 E4	±
2	35335e	LH0035335e	Rotor Assy OF T-BOSS 550 E4 NEW	1
3	10182	LH00010182	Bolt M6×30 OF T-BOSS 550 E4	3
4	71688	LH00071688	Nut M16×1.5 OF T-BOSS 550 E4	1
5	71689	LH00071689	Washer 16.5 OF T-BOSS 550 E4	1

 Electric Starter

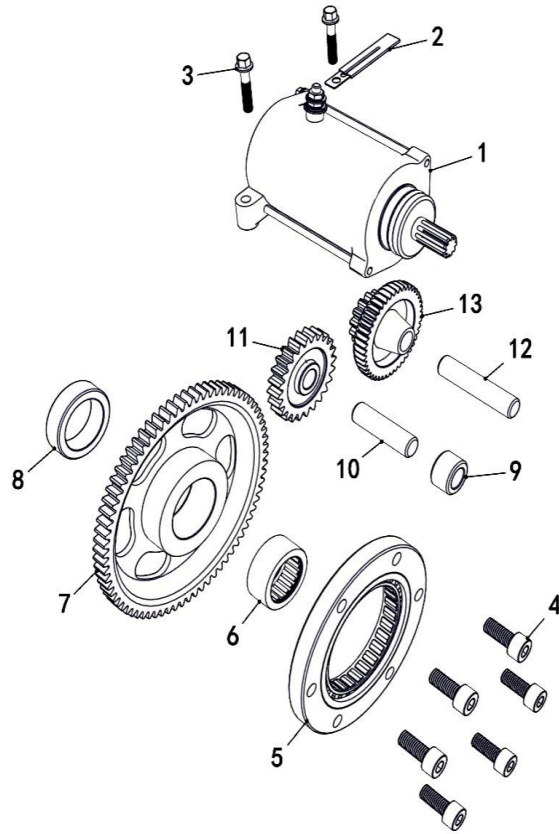


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35336	LH00035336	Starting Motor OF T-BOSS 550 E4	1
2	35247	LH00035247	Cable Clamp OF T-BOSS 550 E4	1
3	10182	LH00010182	Bolt M6×30 OF T-BOSS 550 E4	2
4	10830	LH00010830	Screw M8×20 OF T-BOSS 550 E4	6
5	35265	LH00035265	Stator Clutch OF T-BOSS 550 E4	1
6	10859	LH00010859	Needle Bearing Rna49/22 OF T-BOSS 550 E4	1
7	35260	LH00035260	Output Gear Assy OF T-BOSS 550 E4	1
8	35259	LH00035259	Spacer OF T-BOSS 550 E4	1
9	35264	LH00035264	Idle Gear Bushing OF T-BOSS 550 E4	1
10	35262	LH00035262	Idle Gear Shaft OF T-BOSS 550 E4	1
11	35263	LH00035263	Idle Gear OF T-BOSS 550 E4	1
12	35261	LH00035261	Axle, Dual Gear OF T-BOSS 550 E4	1
13	35258	LH00035258	Dual Gear OF T-BOSS 550 E4	1

 Clutch

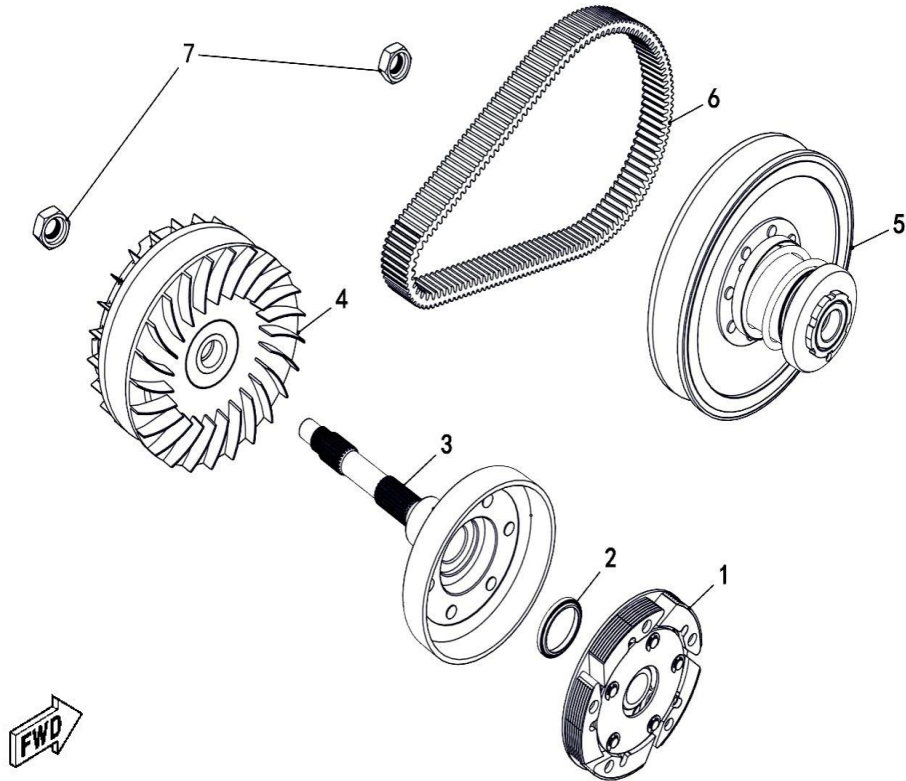


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35296	LH00035296	Clutch Carrier Assy OF T-BOSS 550 E4	1
2	35293	LH00035293	Oil Seal 38×46×4/6, End Face OF T-BOSS 550 E4	1
3	35295	LH00035295	Clutch Housing Assy OF T-BOSS 550 E4	1
4	35298	LH00035298	Drive Assy Comp OF T-BOSS 550 E4	1
5	35299	LH00035299	Driven Assy Comp OF T-BOSS 550 E4	1
6	35297	LH00035297	V-Belt OF T-BOSS 550 E4	1
7	35294	LH00035294	Nut M20×1.5 OF T-BOSS 550 E4	2

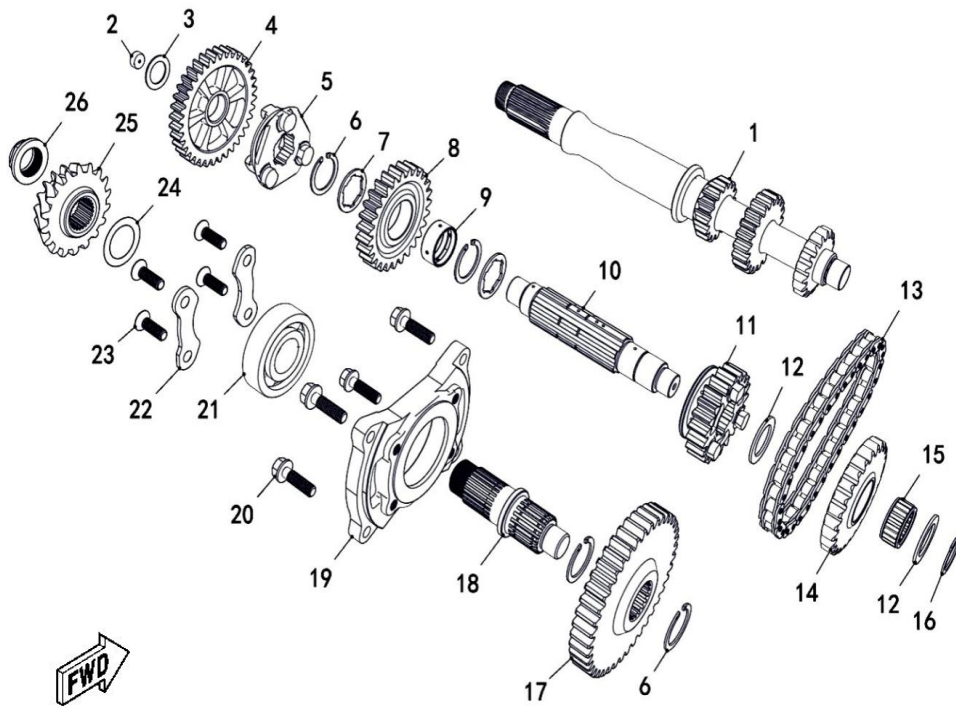 
Transmission I


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35320	LH00035320	Main Shaft. Gearshift OF T-BOSS 550 E4	1
2	35309	LH00035309	Bell Plug 12 OF T-BOSS 550 E4	1
3	35307	LH00035307	Washer 17.5×26×1 OF T-BOSS 550 E4	1
4	35318	LH00035318	Driven Gear, Low Range OF T-BOSS 550 E4	1
5	35314	LH00035314	Sliding Bush, Gearshift OF T-BOSS 550 E4	1
6	35311	LH00035311	Circlip 25 OF T-BOSS 550 E4	4
7	35310	LH00035310	Spline Washer OF T-BOSS 550 E4	2
8	35316	LH00035316	Driven Gear, High Range OF T-BOSS 550 E4	1
9	35317	LH00035317	Bushing, Driven High Range Gear OF T-BOSS 550 E4	1
10	35315	LH00035315	Driven Shaft OF T-BOSS 550 E4	1
11	35308	LH00035308	Driven Output Gear OF T-BOSS 550 E4	1
12	35312	LH00035312	Washer 20.5×30×1.5 OF T-BOSS 550 E4	2
13	35313	LH00035313	Chain, Reverse Gear OF T-BOSS 550 E4	1
14	35319	LH00035319	Sprocket, Reverse Gear OF T-BOSS 550 E4	1
15	10858	LH00010858	Needle Bearing K20×26×12 OF T-BOSS 550 E4	1
16	24407	LH00024407	Circlip 20 OF T-BOSS 550 E4	1
17	35271	LH00035271	Output Driven Gear OF T-BOSS 550 E4	1
18	35276	LH00035276	Drive Bevel Gear Shaft OF T-BOSS 550 E4	1
19	35274	LH00035274	Bearing Seat, Drive Bevel Gear OF T-BOSS 550 E4	1
20	35286	LH00035286	Bolt M8×28 OF T-BOSS 550 E4	4
21	10855	LH00010855	Bearing 6305C3 OF T-BOSS 550 E4	1
22	35287	LH00035287	Bearing Limit OF T-BOSS 550 E4	2
23	10276	LH00010276	Screw M8×25 OF T-BOSS 550 E4	4
24	35277	LH00035277	Adjust Washer, Drive Bevel Gear OF T-BOSS 550 E4	1
25	35272	LH00035272	Drive Bevel Gear OF T-BOSS 550 E4	1
26	35275	LH00035275	Locknut, Bevel Gear OF T-BOSS 550 E4	1

 Transmission II

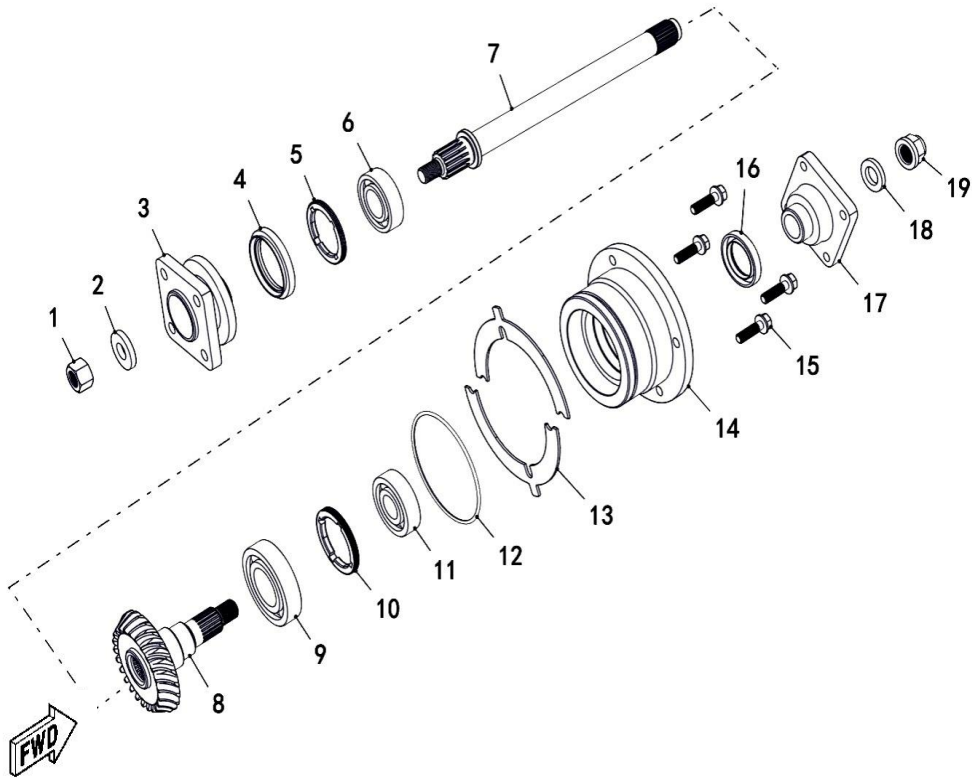


Ref.No.	Part Number	Part Number	Description	Q'ty
1	10837	LH00010837	Nut M14×1.5-10 OF T-BOSS 550 E4	1
2	35292	LH00035292	Washer,Front Transmisson Output Shaft Nut OF T-BOSS 550 E4	1
3	48430	LH00048430	Coupler, Front Transmission Output OF T-BOSS 550 E4	1
4	35289	LH00035289	Oil Seal 44×60×6.7/10 OF T-BOSS 550 E4	1
5	35291	LH00035291	Bearing Retainer, Front Output Shaft OF T-BOSS 550 E4	1
6	10267N	LH0010267N	Bearing 6205 OF T-BOSS 550 E4	1
7	35288	LH00035288	Front Output Shaft OF T-BOSS 550 E4	1
8	35273	LH00035273	Driven Bevel Gear OF T-BOSS 550 E4	1
9	10856	LH00010856	Bearing 6207/P63 OF T-BOSS 550 E4	1
10	35282	LH00035282	Bearing Limit Nut OF T-BOSS 550 E4	1
11	10848	LH00010848	Bearing 63/22 OF T-BOSS 550 E4	1
12	35279	LH00035279	O-Ring 88×2.4 OF T-BOSS 550 E4	1
13	35280	LH00035280	Adjust Washer, Driven Bevel Gear OF T-BOSS 550 E4	2
14	35278	LH00035278	Bearing Seat, Driven Bevel Gear OF T-BOSS 550 E4	1
15	35286	LH00035286	Bolt M8×28 OF T-BOSS 550 E4	4
16	35281	LH00035281	Oil Seal 30×46×7 OF T-BOSS 550 E4	1
17	35283	LH00035283	Coupler, Rear Transmission Output OF T-BOSS 550 E4	1
18	35284	LH00035284	Washer, Rear Output Shaft Nut OF T-BOSS 550 E4	1
19	35285	LH00035285	Nut, Rear Output Shaft OF T-BOSS 550 E4	1

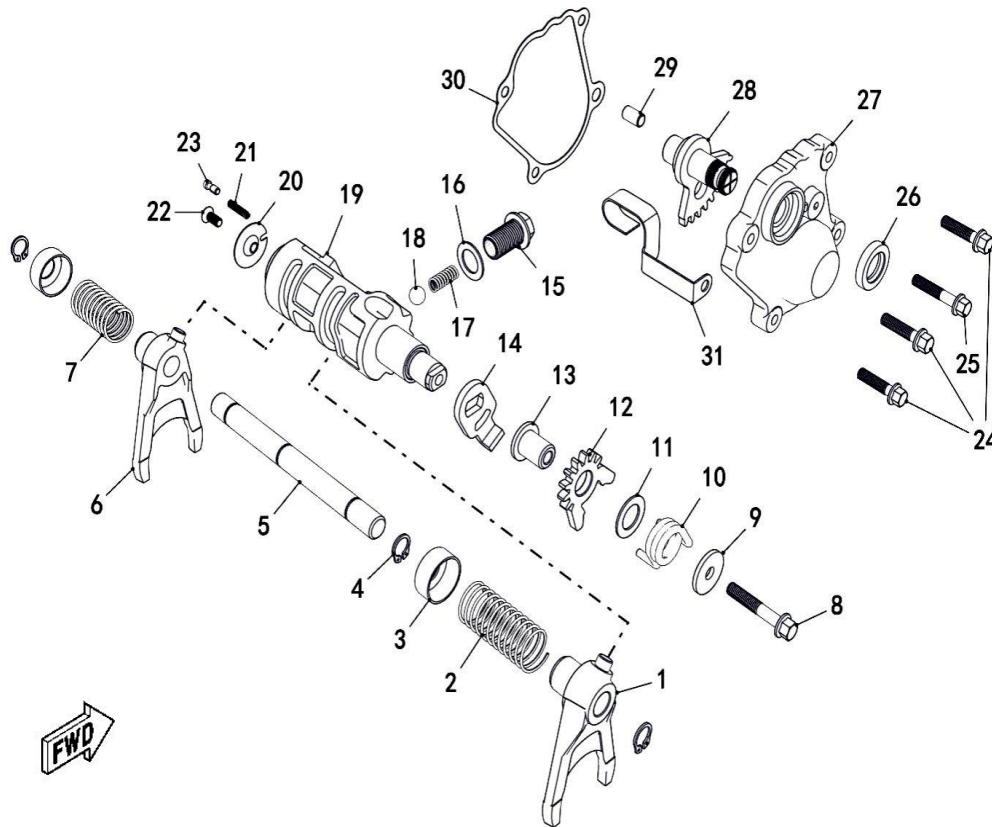 Transmission III

 
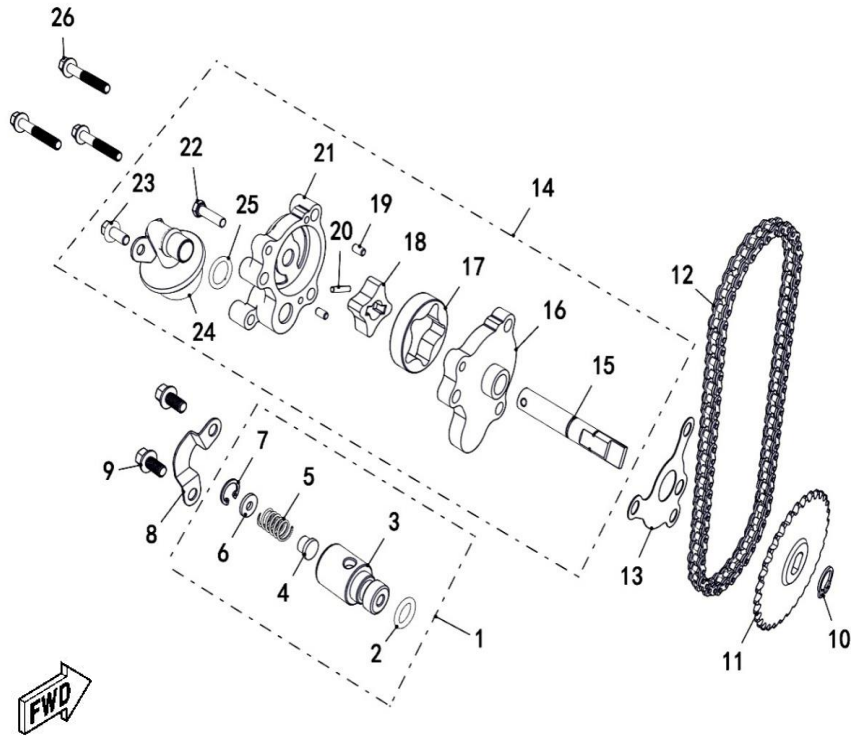 
Ref.No.	Part Number	Part Number	Description	Q'ty
1	35330	LH00035330	Left Shift Fork OF T-BOSS 550 E4	1
2	35327	LH00035327	Spring 1, Shift Fork OF T-BOSS 550 E4	1
3	35326	LH00035326	Spring Seat OF T-BOSS 550 E4	2
4	10129	LH00010129	Circlip 12 OF T-BOSS 550 E4	3
5	35333	LH00035333	Guide Bar OF T-BOSS 550 E4	1
6	35329	LH00035329	Right Shift Fork OF T-BOSS 550 E4	1
7	35328	LH00035328	Spring 2, Shift Fork OF T-BOSS 550 E4	1
8	10186	LH00010186	Bolt M6×35 OF T-BOSS 550 E4	1
9	35306	LH00035306	Washer 6.6×22×2 OF T-BOSS 550 E4	1
10	35305	LH00035305	Torsion Spring, Driven Sector Gear OF T-BOSS 550 E4	1
11	35304	LH00035304	Washer 13.5×22×1 OF T-BOSS 550 E4	1
12	35301	LH00035301	Driven Sector Gear OF T-BOSS 550 E4	1
13	35302	LH00035302	Shaft, Driven Sector Gear OF T-BOSS 550 E4	1
14	35303	LH00035303	Washer, Driven Sector Gear OF T-BOSS 550 E4	1
15	35325	LH00035325	Hole Bolt M14×1.5 OF T-BOSS 550 E4	1
16	35324	LH00035324	Washer 14×22×1 OF T-BOSS 550 E4	1
17	35332	LH00035332	Limit Spring OF T-BOSS 550 E4	1
18	10842	LH00010842	Friction Ball 3/8 OF T-BOSS 550 E4	1
19	35331	LH00035331	Shift Cam OF T-BOSS 550 E4	1
20	35323	LH00035323	Limit Washer OF T-BOSS 550 E4	1
21	35322	LH00035322	Spring, Gear Contactor OF T-BOSS 550 E4	1
22	10135	LH00010135	Screw M5×12 OF T-BOSS 550 E4	1
23	35321	LH00035321	Gear Contactor OF T-BOSS 550 E4	1
24	10187	LH00010187	Bolt M6×25 OF T-BOSS 550 E4	3
25	10329	LH00010329	Bolt M6×32 OF T-BOSS 550 E4	1
26	35242	LH00035242	Oil Seal 15×25×5 OF T-BOSS 550 E4	1

Transmission III

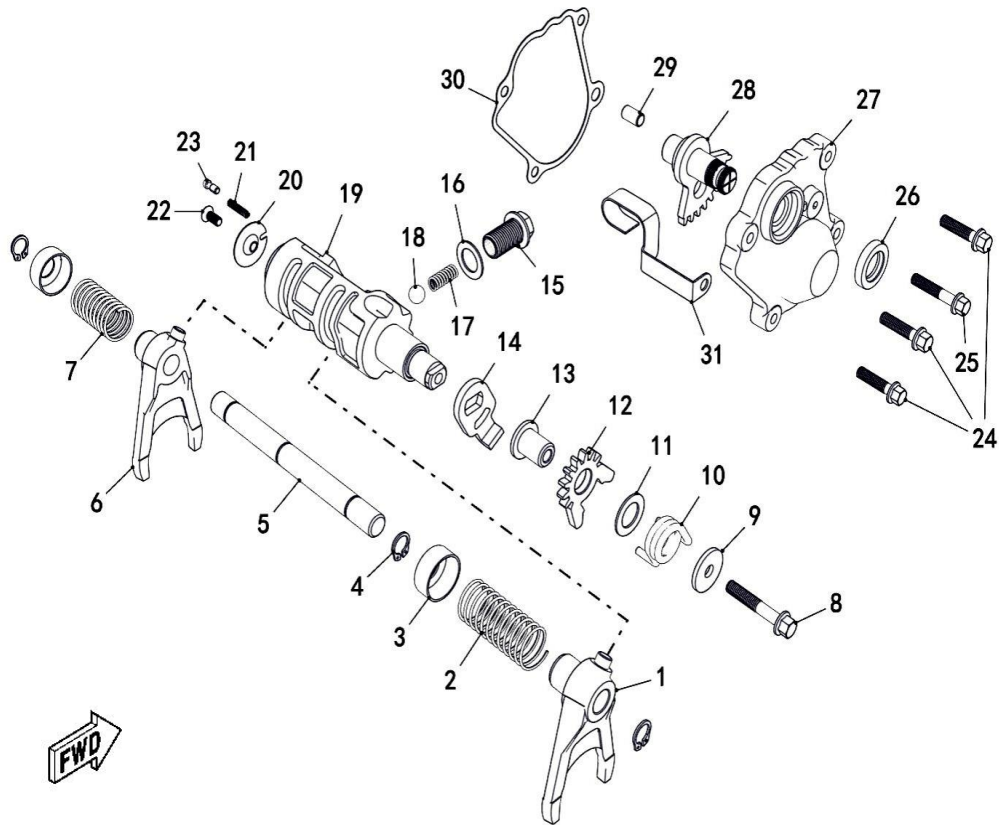


Ref.No.	Part Number	Part Number	Description	Q'ty
27	35240	LH00035240	Cover, Sector Gear Housing OF T-BOSS 550 E4	1
28	35300	LH00035300	Weld Part, Drive Sector Gear OF T-BOSS 550 E4	1
29	50076	LH00050076	Dowel Pin 8×14 OF T-BOSS 550 E4	1
30	35241	LH00035241	Gasket, Sector Gear Housing OF T-BOSS 550 E4	1
31	35243	LH00035243	Clip OF T-BOSS 550 E4	1

Oil Pump




Ref.No.	Part Number	Part Number	Description	Q'ty
1	35197	LH00035197	Relief Valve OF T-BOSS 550 E4	1
2	35200	LH00035200	O-Ring 10x2.3 OF T-BOSS 550 E4	1
3	35198	LH00035198	Relief Valve Body OF T-BOSS 550 E4	1
4	35199	LH00035199	Oil Plug, Relief Valve OF T-BOSS 550 E4	1
5	35201	LH00035201	Spring Relief Valve OF T-BOSS 550 E4	1
6	35202	LH00035202	Spring Washer OF T-BOSS 550 E4	1
7	10838	LH00010838	Circlip 12 OF T-BOSS 550 E4	1
8	35203	LH00035203	Pressure Strip,Relief Valve OF T-BOSS 550 E4	1
9	10140	LH00010140	Bolt M6x12 OF T-BOSS 550 E4	2
10	10840	LH00010840	Circlip 11 OF T-BOSS 550 E4	1
11	35191	LH00035191	Sprocket, Oil Pump OF T-BOSS 550 E4	1
12	35196	LH00035196	Chain, Oil Pump OF T-BOSS 550 E4	1
13	35206	LH00035206	Gasket, Oil Pump OF T-BOSS 550 E4	1
14	35195	LH00035195	Oil Pump OF T-BOSS 550 E4	1
15	35192	LH00035192	Shaft, Oil Pump OF T-BOSS 550 E4	1
16	35187	LH00035187	Cover, Oil Pump OF T-BOSS 550 E4	1
17	35189	LH00035189	Outer Rotor,Oil Pump OF T-BOSS 550 E4	1
18	35190	LH00035190	Inner Rotor,Oil Pump OF T-BOSS 550 E4	1
19	35193	LH00035193	Dowel Pin OF T-BOSS 550 E4	2
20	35194	LH00035194	Straight Pin OF T-BOSS 550 E4	1
21	35188	LH00035188	Oil Pump Housing OF T-BOSS 550 E4	1
22	10857	LH00010857	Screw M5x20 OF T-BOSS 550 E4	1
23	35204	LH00035204	Oil Strainer OF T-BOSS 550 E4	1
24	10210	LH00010210	Bolt M6x14 OF T-BOSS 550 E4	1
25	35205	LH00035205	O-Ring 14x2.5 OF T-BOSS 550 E4	1
26	10177	LH00010177	Bolt M6x40 OF T-BOSS 550 E4	3

 Water Pump

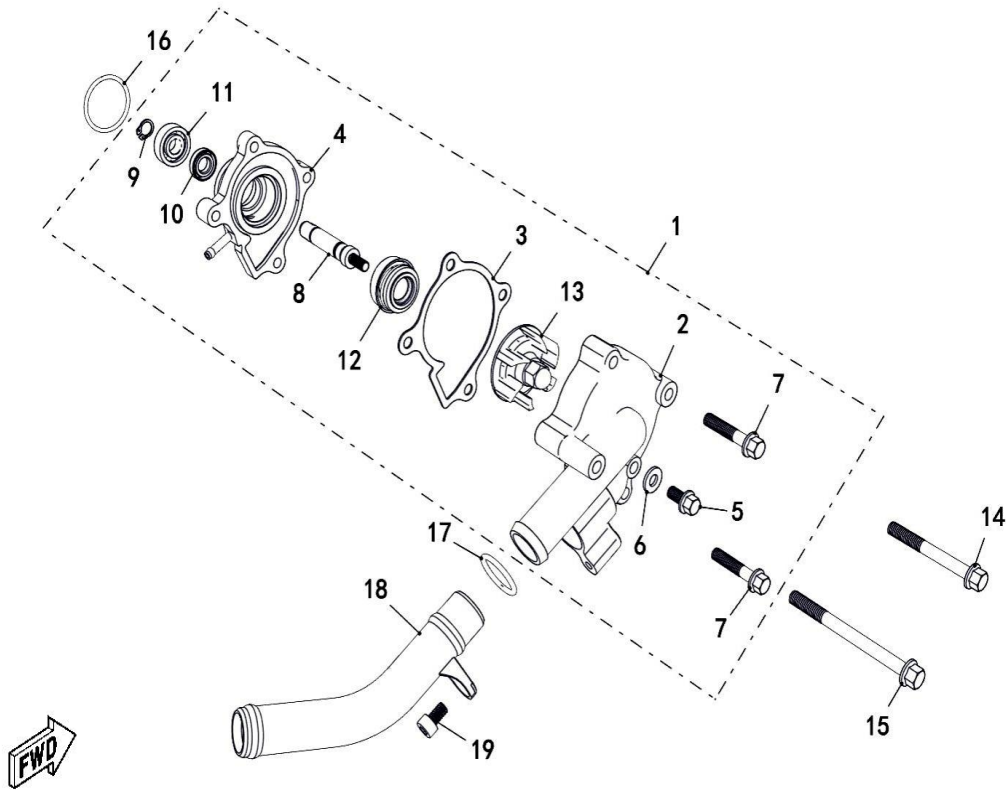


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35179	LH00035179	Water Pump Assy OF T-BOSS 550 E4	1
2	35173	LH00035173	Water Pump Cover OF T-BOSS 550 E4	1
3	35176	LH00035176	Gasket OF T-BOSS 550 E4	1
4	35172	LH00035172	Water Pump Housing OF T-BOSS 550 E4	1
5	10140	LH00010140	Bolt M6×12 OF T-BOSS 550 E4	1
6	35108	LH00035108	Washer 6 OF T-BOSS 550 E4	1
7	10182	LH00010182	Bolt M6×30 OF T-BOSS 550 E4	2
8	35175	LH00035175	Water Pump Shaft OF T-BOSS 550 E4	1
9	10839	LH00010839	Circlip 10 OF T-BOSS 550 E4	1
10	35177	LH00035177	Oil Seal 10×20×5 OF T-BOSS 550 E4	1
11	70020	LH00070020	Bearing 6000 OF T-BOSS 550 E4	1
12	35178	LH00035178	Water Seal OF T-BOSS 550 E4	1
13	35180	LH00035180	Impeller OF T-BOSS 550 E4	1
14	10349	LH00010349	Bolt M6×50 OF T-BOSS 550 E4	1
15	10160	LH00010160	Bolt M6×70 OF T-BOSS 550 E4	1
16	35174	LH00035174	O-Ring 34×2.5 OF T-BOSS 550 E4	1
17	35182	LH00035182	O-Ring 21×2.5 OF T-BOSS 550 E4	1
18	35181	LH00035181	Water Outlet Pipe OF T-BOSS 550 E4	1
19	10831	LH00010831	Screw M6×10 OF T-BOSS 550 E4	1

 Left Side Cover

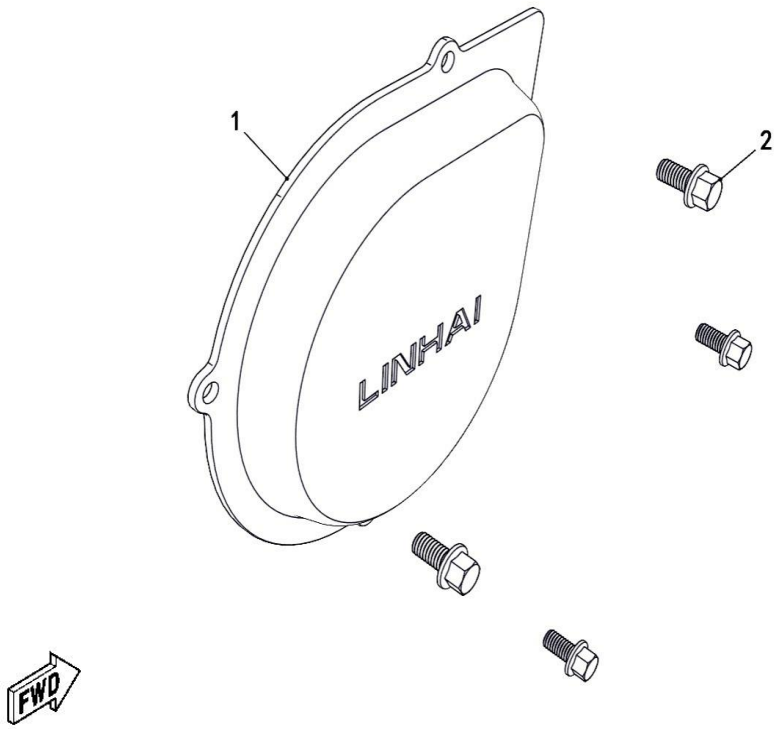


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35270	LH00035270	Left Side Cover OF T-BOSS 550 E4	1
2	10140	LH00010140	Bolt M6×12 OF T-BOSS 550 E4	4

 Fuel Injection Assy

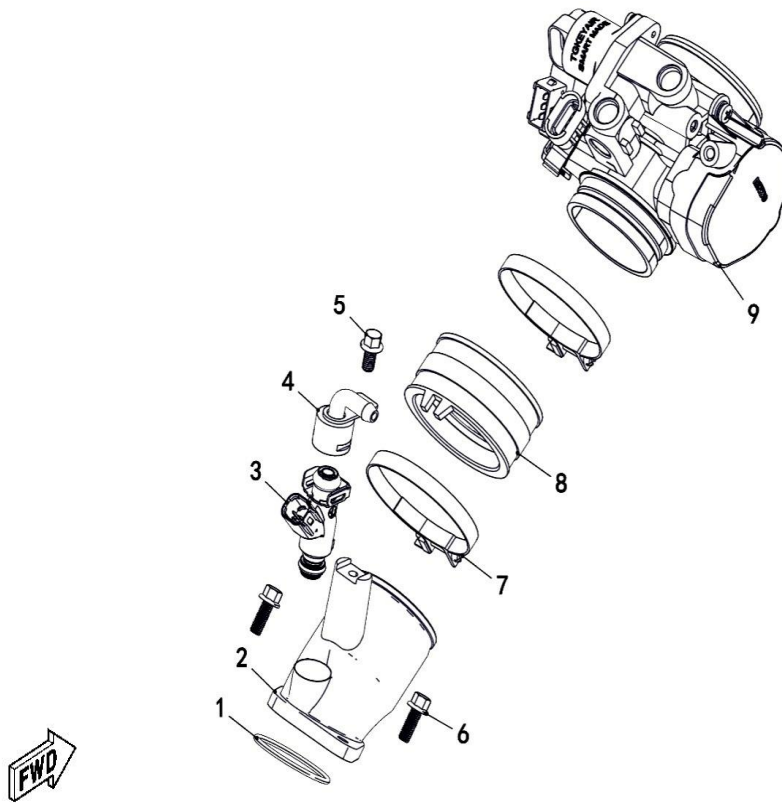


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35207	LH00035207	O-Ring 40×2.4 OF T-BOSS 550 E4	1
2	35744	LH00035744	Joint, Carburetor OF T-BOSS 550 E4	1
3	35745	LH00035745	Injector OF T-BOSS 550 E4	1
4	71850	LH00071850	Injector Cap OF T-BOSS 550 E4	1
5	10716W	LH0010716W	Bolt M6×10 OF T-BOSS 550 E4	1
6	10183B	LH0010183B	Bolt M6×16 OF T-BOSS 550 E4	2
7	71844	LH00071844	Clip 64 OF T-BOSS 550 E4	2
8	71849	LH00071849	Joint, Feed Hose OF T-BOSS 550 E4	1
9	36201	LH00036201	Throttle Body Assembly OF T-BOSS 550 E4	1

 CVT Air Shroud

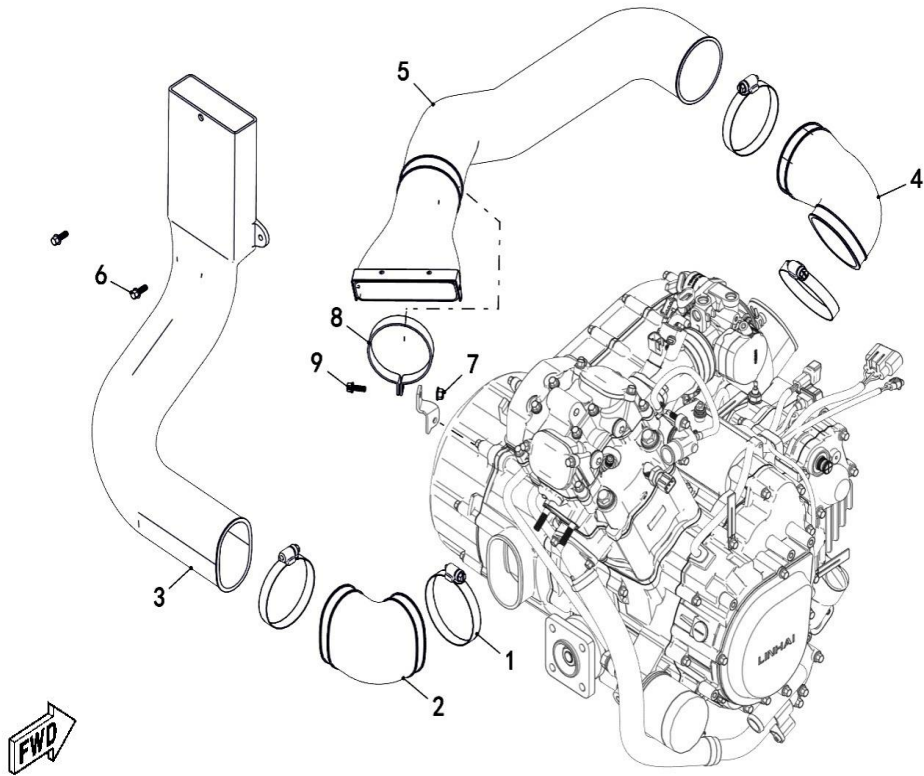


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35670	LH00035670	Clamp 80 OF T-BOSS 550 E4	4
2	48007	LH00048007	Rubber Joint Air Shroud 1, CVT OF T-BOSS 550 E4	1
3	48008	LH00048008	Air Shroud 1, CVT OF T-BOSS 550 E4	1
4	26339	LH00026339	Rubber Joint Air Shroud 2, CVT OF T-BOSS 550 E4	1
5	48009	LH00048009	Air Shroud 2, CVT OF T-BOSS 550 E4	1
6	10183B	LH0010183B	Bolt M6×16 OF T-BOSS 550 E4	2
7	10004	LH00010004	Nut M6 OF T-BOSS 550 E4	1
8	48011	LH00048011	Clamp Air Shroud 2, CVT OF T-BOSS 550 E4	1
9	10187B	LH0010187B	Bolt M6×25 OF T-BOSS 550 E4	1

 Air Cleaner

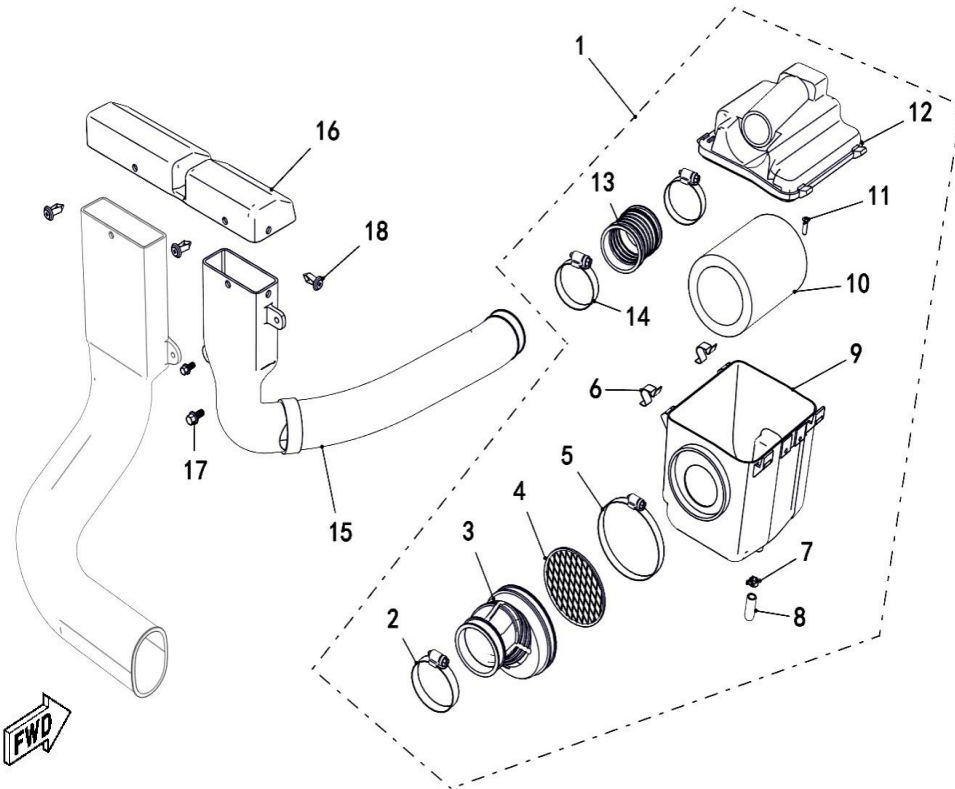


Ref.No.	Part Number	Part Number	Description	Q'ty
1	48034	LH00048034	Air Cleaner Assy OF T-BOSS 550 E4	1
2	35747	LH00035747	Clip 52/76 OF T-BOSS 550 E4	1
3	35358e	LH0035358e	Feed Hose OF T-BOSS 550 E4	1
4	35364	LH00035364	Filter OF T-BOSS 550 E4	1
5	35359	LH00035359	Clip 2 OF T-BOSS 550 E4	1
6	35362	LH00035362	Clip, Air Cleaner Cover OF T-BOSS 550 E4	2
7	35366	LH00035366	Spring Clip OF T-BOSS 550 E4	1
8	35365	LH00035365	Hose 2,Air Cleaner OF T-BOSS 550 E4	1
9	35363	LH00035363	Case, Air Cleaner OF T-BOSS 550 E4	1
10	35361	LH00035361	Element Comp Air Cleaner OF T-BOSS 550 E4	1
11	35367	LH00035367	Screw OF T-BOSS 550 E4	1
12	35360	LH00035360	Cover, Air Cleaner OF T-BOSS 550 E4	1
13	26345	LH00026345	Air Cleaner Joint Hose OF T-BOSS 550 E4	1
14	26346	LH00026346	Clip, Air Cleaner Joint Hose OF T-BOSS 550 E4	2
15	48035	LH00048035	Intake Hose OF T-BOSS 550 E4	1
16	48010	LH00048010	Intake Hose Cover OF T-BOSS 550 E4	1
17	10183B	LH0010183B	Bolt M6×16 OF T-BOSS 550 E4	2
18	26760	LH00026760	Plastic Screw OF T-BOSS 550 E4	3

 Exhaust

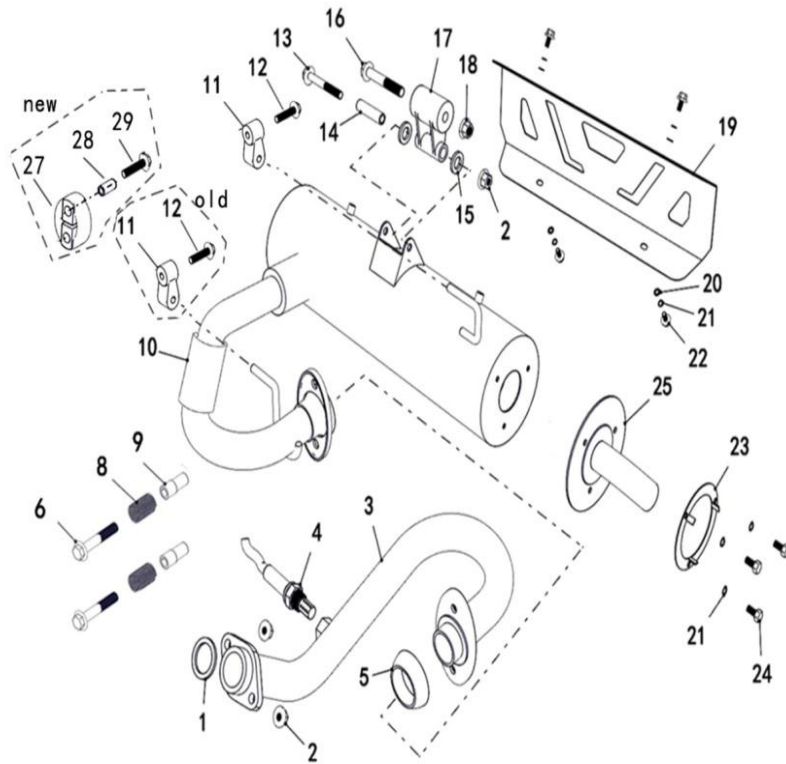


Ref.No.	Part Number	Part Number	Description	Q'ty
1	48037	LH00048037	Gasket,Exhaust Pipe OF T-BOSS 550 E4	1
2	10079	LH00010079	Nut M8 OF T-BOSS 550 E4	3
3	48036	LH00048036	Pipe,Exhaust OF T-BOSS 550 E4	1
4	70826	LH00070826	Oxygen Sensor OF T-BOSS 550 E4	1
5	35370	LH00035370	Jount OF T-BOSS 550 E4	1
6	11184	LH00011184	Bolt M10×60 OF T-BOSS 550 E4	2
7	11035	LH00011035	Washer 10 OF T-BOSS 550 E4	2
8	47076	LH00047076	Spring OF T-BOSS 550 E4	2
9	47077	LH00047077	Spacer 13×35 OF T-BOSS 550 E4	2
10	48431	LH00048431	Muffler OF T-BOSS 550 E4	1
11	48040	LH00048040	Soft Rubber Connection OF T-BOSS 550 E4	2
12	11185	LH00011185	Bolt M8×35 OF T-BOSS 550 E4	2
13	11261	LH00011261	Bolt M8×68 OF T-BOSS 550 E4	1
14	48042	LH00048042	Spacer 11.7×46 OF T-BOSS 550 E4	1
15	48043	LH00048043	Wire Washer OF T-BOSS 550 E4	2
16	10154	LH00010154	Bolt M10×1.25×70 OF T-BOSS 550 E4	1
17	48041	LH00048041	Connection Block OF T-BOSS 550 E4	1
18	10795	LH00010795	Nut M10 OF T-BOSS 550 E4	1
19	48039	LH00048039	Cover,Muffler OF T-BOSS 550 E4	1
20	11090	LH00011090	Washer 6 OF T-BOSS 550 E4	4
21	11019	LH00011019	Washer 6 OF T-BOSS 550 E4	7
22	11345	LH00011345	Bolt M6×16 OF T-BOSS 550 E4	4
23	26364	LH00026364	Washer,Muffler OF T-BOSS 550 E4	1
24	11320	LH00011320	BOLT M6×16 OF T-BOSS 550 E4	3
25	48432	LH00048432	Tail Pipe OF T-BOSS 550 E4	1
27	73838	LH00073838	Pipe Hanger NEW	1
28	73839	LH00073839	Septum, Pipe Hanger NEW	1
29	10218	LH00010218	Bolt M8×40 NEW	1

 OIL RADIATOR

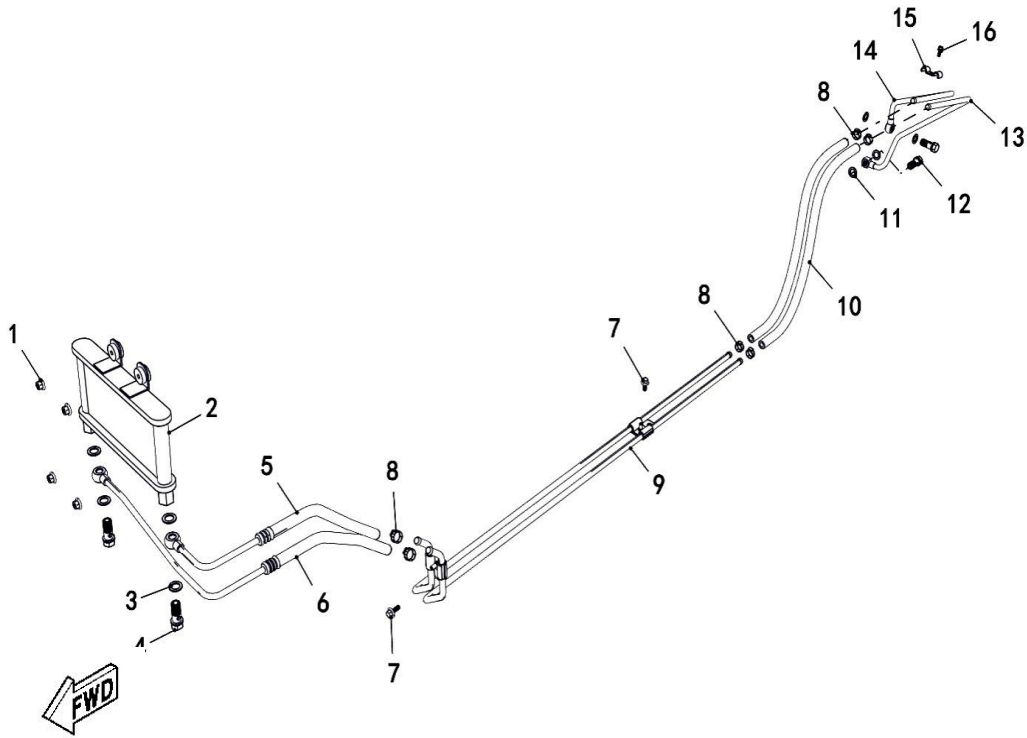


Ref.No.	Part Number	Part Number	Description	Q'ty
1	10004	LH00010004	Nut 6 OF T-BOSS 550 E4	4
2	29850	LH00029850	Oil Radiator OF T-BOSS 550 E4	1
3	35341	LH00035341	Washer OF T-BOSS 550 E4	4
4	35379	LH00035379	Drain Plug OF T-BOSS 550 E4	2
5	48022	LH00048022	Pipe B OF T-BOSS 550 E4	1
6	48021	LH00048021	Pipe A OF T-BOSS 550 E4	1
7	10183B	LH0010183B	Bolt M6×16 OF T-BOSS 550 E4	2
8	48027	LH00048027	Clamp 17.8 OF T-BOSS 550 E4	6
9	48026	LH00048026	Bracket OF T-BOSS 550 E4	1
10	48024	LH00048024	Pipe 1 OF T-BOSS 550 E4	2
11	35215	LH00035215	Washer 14 OF T-BOSS 550 E4	4
12	35214	LH00035214	Hinge Bolt M14×1.5 OF T-BOSS 550 E4	2
13	48023	LH00048023	Jount B OF T-BOSS 550 E4	1
14	48025	LH00048025	Jount A OF T-BOSS 550 E4	1
15	36014	LH00036014	Plate OF T-BOSS 550 E4	1
16	10140	LH00010140	Bolt M6×12 OF T-BOSS 550 E4	1

 Radiator

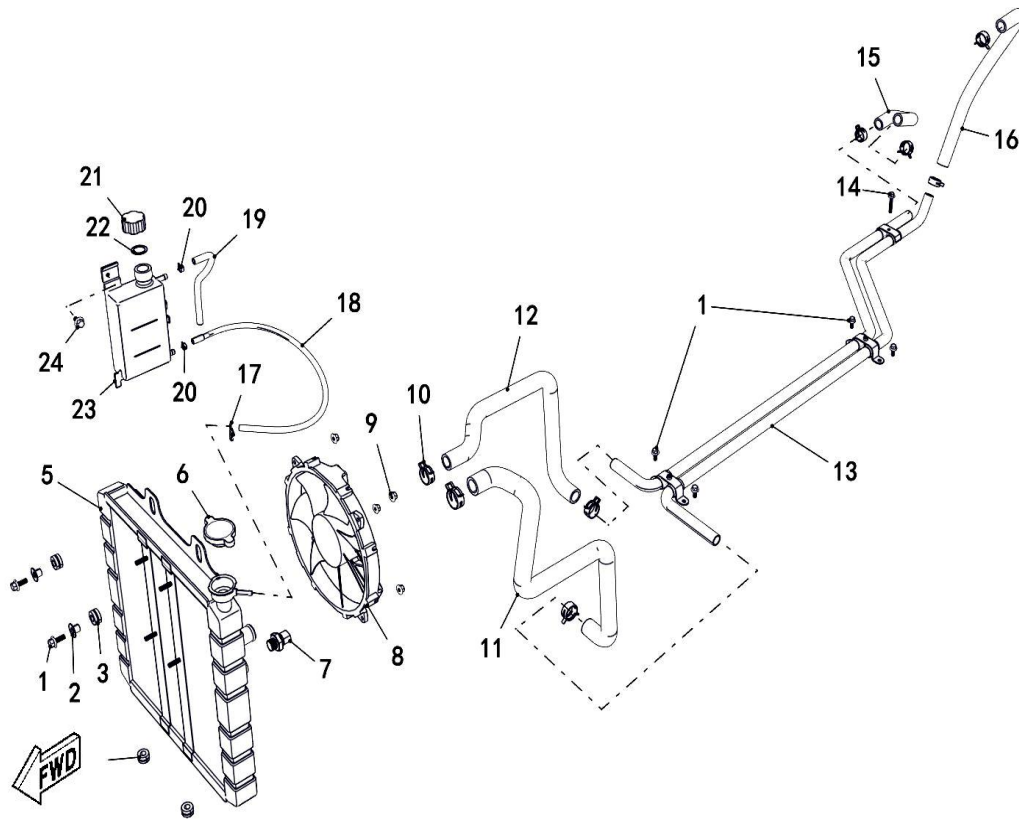


Ref.No.	Part Number	Part Number	Description	Q'ty
1	10183B	LH0010183B	Bolt M6×16 OF T-BOSS 550 E4	6
2	36052	LH00036052	Collar OF T-BOSS 550 E4	2
3	36053	LH00036053	Radiator Side Grommet,Up OF T-BOSS 550 E4	2
4	36054	LH00036054	Radiator Side Grommet,Down OF T-BOSS 550 E4	2
5	48013	LH00048013	Radiator OF T-BOSS 550 E4	1
6	22907a	LH0022907a	Safety Valve OF T-BOSS 550 E4	1
7	48020	LH00048020	Thermostat Switch Assy OF T-BOSS 550 E4	1
8	35354	LH00035354	Blower Assy OF T-BOSS 550 E4	1
9	10004	LH00010004	Nut M6 OF T-BOSS 550 E4	4
10	11203	LH00011203	Clip 28 OF T-BOSS 550 E4	8
11	48017	LH00048017	Hose,Feed OF T-BOSS 550 E4	1
12	48016	LH00048016	Hose,Return OF T-BOSS 550 E4	1
13	48015	LH00048015	Bracket OF T-BOSS 550 E4	1
14	10177B	LH0010177B	Bolt M6×40 OF T-BOSS 550 E4	1
15	48018	LH00048018	Feed Hose, Valve OF T-BOSS 550 E4	1
16	48019	LH00048019	Return Hose, Cylinder OF T-BOSS 550 E4	1
17	48014	LH00048014	Clip 8 OF T-BOSS 550 E4	1
18	48066	LH00048066	Pipe,Safety Valve OF T-BOSS 550 E4	1
19	48325	LH00048325	Pipe,Tank Recovery OF T-BOSS 550 E4	1
20	22924	LH00022924	Clip OF T-BOSS 550 E4	2
21	70338	LH00070338	Cover,Tank Recovery OF T-BOSS 550 E4	1
22	70339	LH00070339	Washer,Tank Recovery OF T-BOSS 550 E4	1
23	83456	LH00083456	Tank Recovery OF T-BOSS 550 E4	1
24	10140B	LH0010140B	Bolt M6×12 OF T-BOSS 550 E4	1

 Front Axle

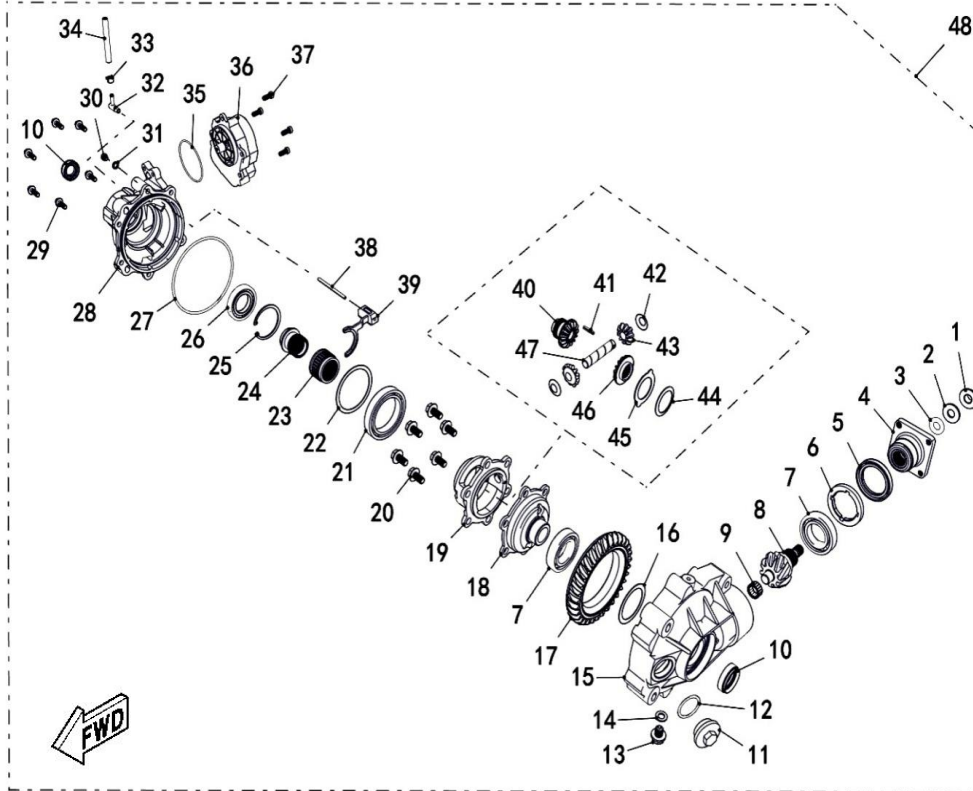


Ref.No.	Part Number	Part Number	Description	Q'ty
1	26318	LH00026318	Nut, Front Output Shaft OF T-BOSS 550 E4	1
2	26324	LH00026324	Washer, Front Output Shaft Nut OF T-BOSS 550 E4	1
3	35428	LH00035428	O-Ring OF T-BOSS 550 E4	1
4	26330	LH00026330	Coupler, Front Axle OF T-BOSS 550 E4	1
5	35423	LH00035423	Oil Seal 48×65×9 OF T-BOSS 550 E4	1
6	26317	LH00026317	Bearing Retainer OF T-BOSS 550 E4	1
7	35424	LH00035424	Bearing 6007 OF T-BOSS 550 E4	2
8	48286	LH00048286	Bevel Gear -Driving OF T-BOSS 550 E4	1
9	35429	LH00035429	Needle Bearing OF T-BOSS 550 E4	1
10	35410	LH00035410	Oil Seal 24×38×8 OF T-BOSS 550 E4	2
11	24305	LH00024305	Fill Plug OF T-BOSS 550 E4	1
12	50082	LH00050082	O-Ring 30.5×3 OF T-BOSS 550 E4	1
13	73020	LH00073020	Drain Bolt OF T-BOSS 550 E4	1
14	73021	LH00073021	Washer 10 OF T-BOSS 550 E4	1
15	48285	LH00048285	Front Axle Box Cover OF T-BOSS 550 E4	1
16	26323	LH00026323	Adjusting Shim(61×48) OF T-BOSS 550 E4	as needed
17	48287	LH00048287	Bevel Gear -Driven OF T-BOSS 550 E4	1
18	26334	LH00026334	Top Bracket,Differential Gear OF T-BOSS 550 E4	1
19	26332	LH00026332	Bracket,Differential OF T-BOSS 550 E4	1
20	26331	LH00026331	Bolt M10×1.25×20 OF T-BOSS 550 E4	6
21	10959	LH00010959	Bearing 61912 OF T-BOSS 550 E4	1
22	26322	LH00026322	Adjusting Shim(83×71) OF T-BOSS 550 E4	as needed
23	26315	LH00026315	Drive Clutch OF T-BOSS 550 E4	1
24	26316	LH00026316	Drive Clutch Cover OF T-BOSS 550 E4	1
25	35412	LH00035412	Circlip 62 OF T-BOSS 550 E4	1
26	10960	LH00010960	Bearing 16007 OF T-BOSS 550 E4	1

 Rear Axle

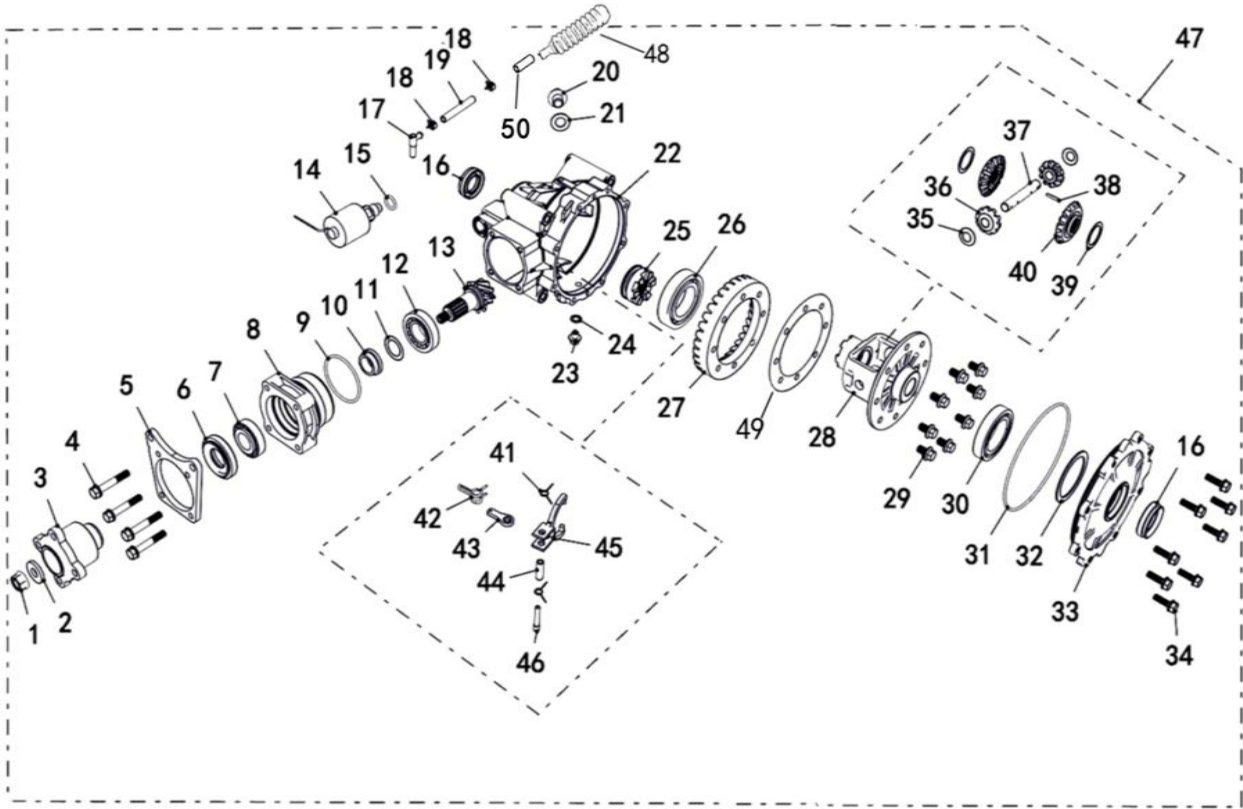


Ref.No.	Part Number	Part Number	Description	Q'ty
1	35285	LH00035285	Nut, Rear Output Shaft OF T-BOSS 550 E4	1
2	35284	LH00035284	Washer, Rear Output Shaft Nut OF T-BOSS 550 E4	1
3	48115	LH00048115	Coupler, Rear Axle OF T-BOSS 550 E4	1
4	11022	LH00011022	Bolt M8×50 OF T-BOSS 550 E4	4
5	48119	LH00048119	Mount Bracket-Parking Braking OF T-BOSS 550 E4	1
6	35471	LH00035471	Oil Seal 35×61×9 OF T-BOSS 550 E4	1
7	11012	LH00011012	Bearing 30205 OF T-BOSS 550 E4	1
8	27583	LH00027583	Bevel Gear Bearing Housing OF T-BOSS 550 E4	1
9	26311	LH00026311	O-Ring 69×3 OF T-BOSS 550 E4	1
10	27581	LH00027581	Bearing Sleeve OF T-BOSS 550 E4	1
11	35277	LH00035277	Adjusting Shim,Bevel Gear -Driving OF T-BOSS 550 E4	as needed
12	11013	LH00011013	Bearing 30206 OF T-BOSS 550 E4	1
13	48116	LH00048116	Bevel Gear -Driving OF T-BOSS 550 E4	1
14	48112	LH00048112	Diff Solenoid OF T-BOSS 550 E4	1
15	73013	LH00073013	O-Ring 17×3 OF T-BOSS 550 E4	1
16	26302	LH00026302	Oil Seal 30×50×13.5 OF T-BOSS 550 E4	2
17	21112	LH00021112	Vent Nozzle OF T-BOSS 550 E4	1
18	25107	LH00025107	Clip OF T-BOSS 550 E4	2
19	48376	LH00048376	Vent Pipe OF T-BOSS 550 E4	1
20	83179	LH00083179	Bolt M18×1.25 OF T-BOSS 550 E4	1
21	83180	LH00083180	Washer 18 OF T-BOSS 550 E4	1
22	48114	LH00048114	Gear Case,Rear Axle OF T-BOSS 550 E4	1
23	73020	LH00073020	Drain Bolt OF T-BOSS 550 E4	1
24	73021	LH00073021	Washer OF T-BOSS 550 E4	1
25	73030	LH00073030	Clutch Gear OF T-BOSS 550 E4	1
26	11023	LH00011023	Bearing 6210 OF T-BOSS 550 E4	1

 Rear Axle

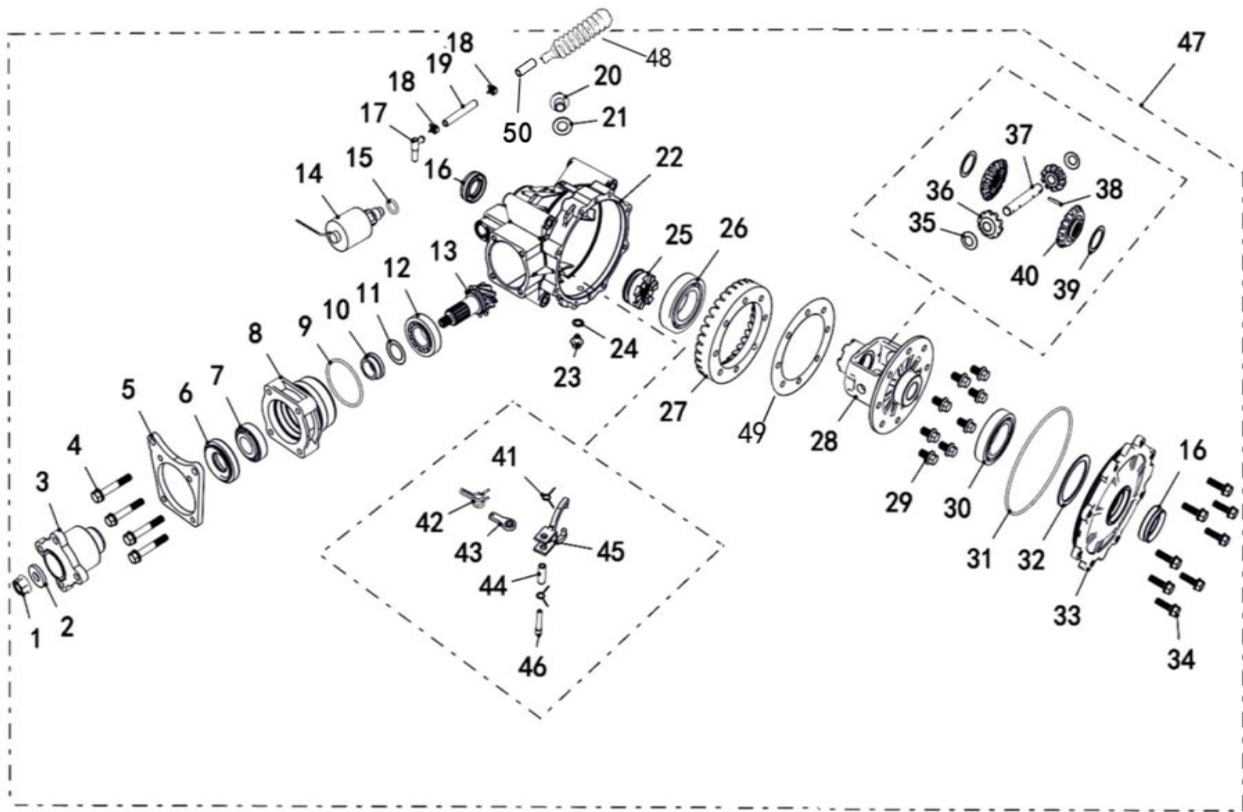

Ref.No.	Part Number	Part Number	Description	Q'ty
27	48117	LH00048117	Bevel Gear -Driven OF T-BOSS 550 E4	1
28	27587	LH00027587	Diff Case OF T-BOSS 550 E4	1
29	27588	LH00027588	Hexagon Flange Bolt M10×1.25×16 OF T-BOSS 550 E4	8
30	10056	LH00010056	Bearing 110 OF T-BOSS 550 E4	1
31	35493	LH00035493	O-Ring 151×3 OF T-BOSS 550 E4	1
32	21106	LH00021106	Adjusting Shim OF T-BOSS 550 E4	as needed
33	27589	LH00027589	Rear Axle Box Cover OF T-BOSS 550 E4	1
34	10059	LH00010059	Bolt M8×25 OF T-BOSS 550 E4	8
35	73036	LH00073036	Wearing Ring OF T-BOSS 550 E4	2
36	73035	LH00073035	Planetary Gear OF T-BOSS 550 E4	2
37	73032	LH00073032	Gear Shaft OF T-BOSS 550 E4	1
38	11024	LH00011024	Pin 4×30 OF T-BOSS 550 E4	1
39	73034	LH00073034	Side Gear Thrust-Washer OF T-BOSS 550 E4	2
40	73031	LH00073031	Diff Side Gear OF T-BOSS 550 E4	2
41	73040	LH00073040	Shift Return Spring OF T-BOSS 550 E4	2
42	73038	LH00073038	Shift Lever Spring OF T-BOSS 550 E4	1
43	27592	LH00027592	Shift Lever OF T-BOSS 550 E4	1
44	27591	LH00027591	Shift Bar OF T-BOSS 550 E4	1
45	73041	LH00073041	Shift Yoke OF T-BOSS 550 E4	1
46	27590	LH00027590	Shift Pin OF T-BOSS 550 E4	1
47	48113	LH00048113	Rear Axle OF T-BOSS 550 E4	1
48	35919	LH00035919	Breathing air	1
49	48431	LH00048431	Gasket,Bevel Gear -Driven OF T-BOSS 550 E4	as needed
50	35918	LH00035918	LINK, BREATHING AIR	1

 Tool

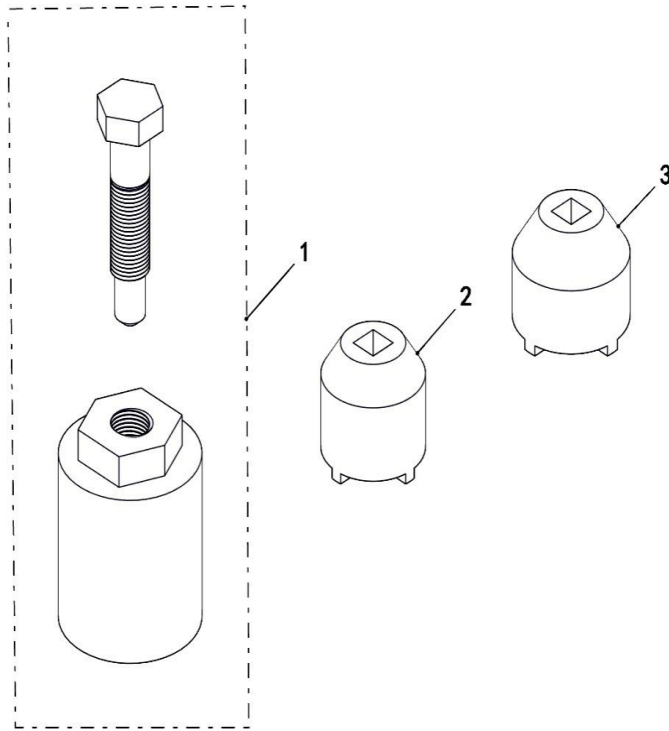

Ref.No.	Part Number	Part Number	Description	Q'ty
1	80129	LH00080129	Rotor Assy Puller OF T-BOSS 550 E4	1
2	80130	LH00080130	Bearing Retainer, Front Output Shaft, Nut Wrench OF T-BOSS 550 E4	1
3	80131	LH00080131	Bearing Limit Nut, Nut Wrench OF T-BOSS 550 E4	1